



FRONT HARD SIDED DOOR (p/n KAFT4-00003R (RED) & KAFT4-003G (GREEN))

FRONT SOFT SIDED DOOR (p/n KAFT4-005R (RED), KAFT4-005G GREEN) & KAFT4-005HG (CAMO))

REAR HARD SIDED DOOR (p/n KAFT4-004R(RED) & KAFT4-004G (GREEN))

REAR SOFT SIDED DOOR (p/n KAFT4-006R (RED), KAFT4-006R GREEN & KAFT4-006R (CAMO))

INSTALLING DOORS

- A.** Install the doors to the cab by sliding the hinge sleeves on the door onto the pin hinges on the unitized side frame. Work the doors back and forth until the hinge sleeves are completely seated. Adjust hinges to align door with unitized side frame.
- B.** Adjust rotary door latch and striker to compress the rubber seal all around the perimeter of the door. When adjustment is complete, re-tighten all hardware.
- C.** Install door stop cable to the top of the door and the top of the unitized side frame (See area D in fig C.) using 5/16"-18 x 3/4" bolts, 5/16" nylon locknuts, and 5/16" SAE flat washers, included in the hardware kit.
NOTE: Lubricate rotary latch and plunger often with spray lubricant.

NOTE: Re-tighten all bolts after 40 hours of operation and every 100 hours thereafter.



fig A

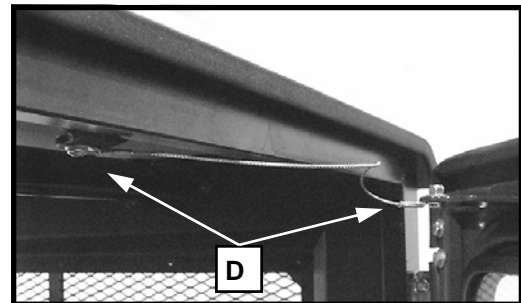



fig C



KAWASAKI TRANS 4 FRONT HS DOOR PARTS LIST (P/N KAFT4-003R (RED) & KAFT4-003G (GREEN))

HARD SIDED DOORS	QTY.	P/N
LEFT DOOR	1	KAT4-19L (R or G)
RIGHT DOOR	1	KAT4-19R (R or G)

R = RED
G = GREEN

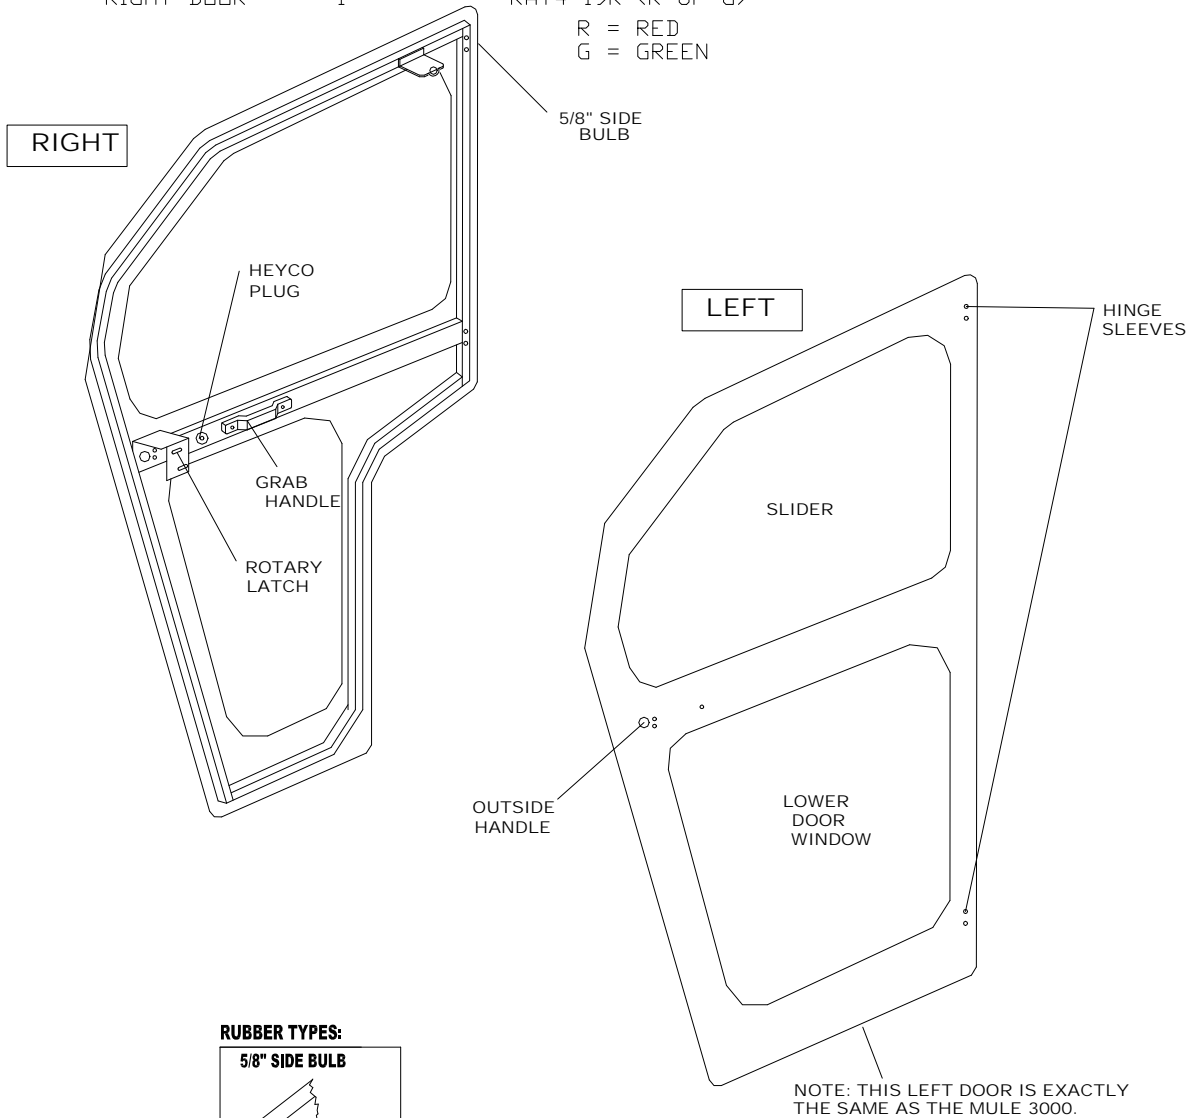

RUBBER TYPES:

5/8" SIDE BULB



9PR17

ADDITIONAL SERVICE PARTS

QTY/CAB	P/N	DESCRIPTION
1	9SW-M3L	LEFT SLIDING WINDOW
1	9SW-M3R	RIGHT SLIDING WINDOW
1	PG-3000LD	LOWER DOOR WINDOW (LH)
1	PG-T4LD	LOWER DOOR WINDOW -RH
2	9PH005	UNITIZED FRAME HINGE KIT
1	9DL01A	ROTARY DOOR LATCH LH
1	9DL01B	ROTARY DOOR LATCH RH
1	9DL01C	OUTSIDE LATCH HANDLE W/KEY
1	9PR17	5/8" SIDE BULB
2	9DS02	CABLE DOOR STOP