



INSTALLATION & OWNER'S MANUAL

Polaris RZR 1000 Windshield Kit

Kit p/n: 1POLRZR1000WS

Fits UTV Models:
POLARIS RZR 1000, 2014+
POLARIS RZR 900, 2015+

Available Options:
Roof Kit (P/N: 1POLRZR1000RF)
Rear Panel Kit (P/N: 1POLRZR1000RP)
Side View Mirrors (P/N: 9PM5)

Approximate Installation Time

Do-It-Yourself: 5-10 minutes

Approximate Product Specifications

Weight: 18.5 lbs.

TOOLS REQUIRED:

Ratchet
3/8" Socket or Wrench
7/16" Socket or Wrench

STEP 1: (KIT INSTALLATION)

If installing multiple Curtis Polaris RZR kits, install in the following order:

1. Windshield
2. Rear Panel
3. Roof

- 1.1 Per figure 1.1, orient (3) of the supplied rubber coated P-clamps around the left ROPS A-pillar.
- 1.2 Repeat on the right side of vehicle.
- 1.3 With assistance, position the windshield assembly. Maneuver up under the front visor, against the ROPS, and down against the hood.

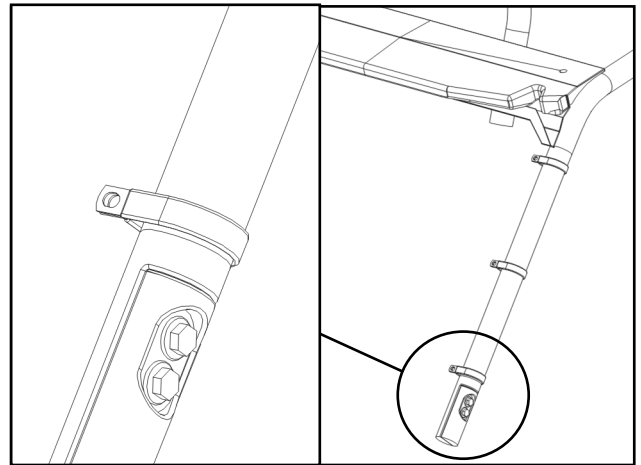


Fig. 1.1 (P-Clamp Orientation)

Register your new product quickly online at
Curtiscab.com/product-registration/



Curtis encourages all customers to register their Curtis products. However, failure to do so will not diminish right to warranty. Curtis Industries does not sell or share your information with anyone else.

Download a digital copy of your installation instructions online at Curtiscab.com/literature/



Curtis strives to continuously improve our products, technical documentation, etc. Therefore, the installation manual for this product may have been updated after your product was packaged. The latest revision of the installation manual can always be found at the website above.

Rev. A, 01/21/2022

p/n: IM-1POLRZR1000WS

STEP 1: (KIT INSTALLATION)

1.4 Secure the windshield assembly to the P-clamps installed during steps 1.1 & 1.2. See figure 1.4 for hardware orientation. Do not overtighten fastener or damage to the window may occur. Stop tightening when grommet just starts to bulge.

Hardware Used

1/4-20 X 1" Flange Hex Head Screw	Qty 6
1/4" Fender Washer	12
1/4-20 Hex Flange Lock Nut	6

Tools required

3/8" socket
7/16" wrench

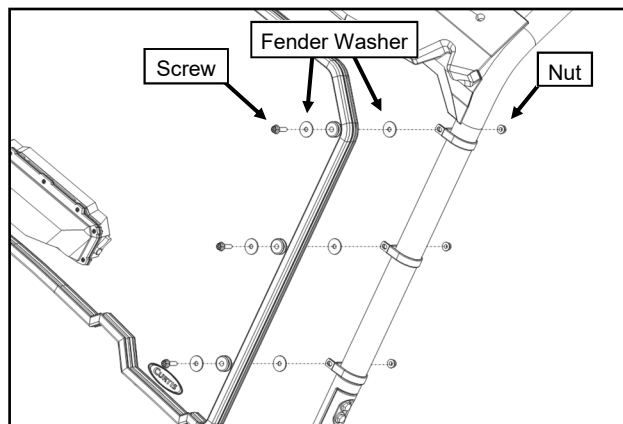


Fig. 1.4 (Windshield Hardware)


KIT FEATURES & OPERATION

WINDSHIELD VENTS

For ventilation, a vent has been provided in this windshield.

To Operate Vent:

- 1) Rotate vent lever away from the windshield to open and towards the windshield to close.
- 2) It can be opened partially to allow air to flow up the inside surface of the windshield to clear fog.

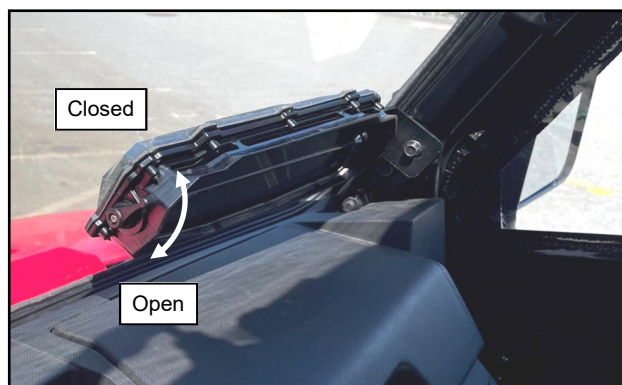


Windshield Vent

CARE AND MAINTENANCE


- Check and tighten hardware after 40 hours of operation. Periodically inspect and tighten hardware for the remainder of the unit's life.
- **DO NOT** clean polycarbonate windows with harsh chemicals. It will damage the plastic. Mild soap and water should be used on the windshield.

AVAILABLE SERVICE PARTS

3/4" SIDE BULB WITH 1/4" GRIP
P/N: 9SV-PR38-15

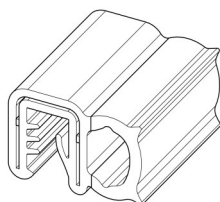

P-CLAMP 1.75" DIA (7 CLAMPS)
P/N: 9SV-9HR0060-P1-3/4

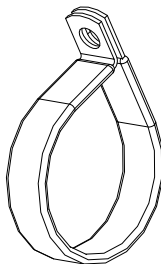

LOUVERED VENT
P/N: 9SV-9HR-00023-R

