




CLUB CAR CARRYALL

Side View Mirrors

p/n: 47587417001

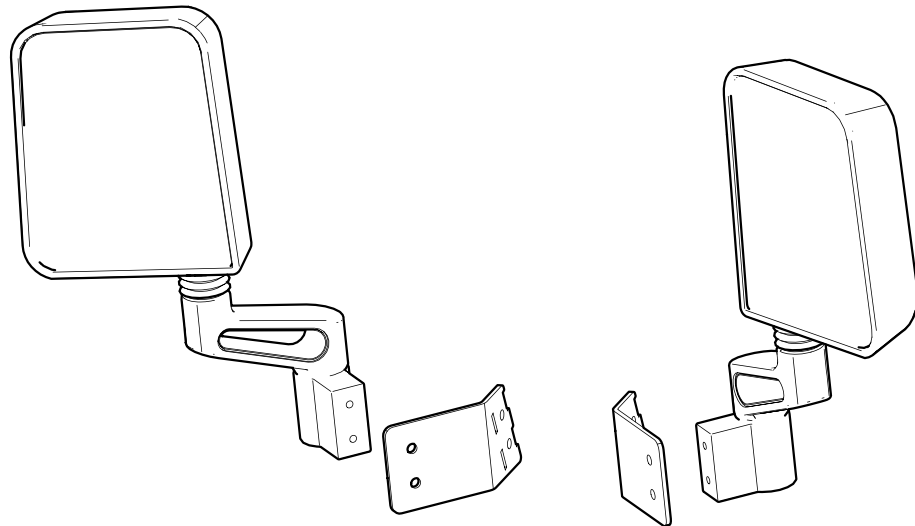

Approximate Installation Time *
Experienced Dealer Technician – 15 Minutes
Average Dealer Technician – 30 Minutes
Do-It-Yourself – 45 Minutes

(* = Not including accessories)

Approximate Product Specifications

The contents of this envelope are the property of the owner. Leave with the owner when installation is complete.

Rev. C, 08/03/2020

p/n: IM-47587417001

WARNINGS, TIPS, & REQUIRED TOOLS

For accurate installation, proper operation, and years of satisfaction, please read and understand the installation and owner's manual fully prior to installing the mirrors.

From all of us at Curtis, we thank you for choosing our product.



NOTICE

Curtis Cabs, blades and general accessories add additional weight to the base vehicle. All Curtis accessory weights are listed in product brochures. Deduct the accessory's total weight from the vehicle's rated capacity and never exceed the vehicle's rated capacity including driver and passenger.



WARNING

Exposure to Carbon Monoxide can Cause illness, serious injury or death. Never operate vehicle if suspicious of Carbon Monoxide. Inspect exhaust system for leaks monthly. Leaks can result from loose connections, corrosion, cracks or other damage to the exhaust manifold. If leaks are found, repair or replace exhaust system. Do not use vehicle until repair or replacement is complete.

TOOLS REQUIRED:

- 3/8" Open-end wrench or socket
- 7/16" Open-end wrench or socket

MIRROR INSTALLATION

1. Carryall 4x2 - On Cab Frame:

NOTE: The Carryall ROPS Basic Cab does not include doors. Side mirrors may be installed onto the frames in place of the upper hinges for the doors.

If doors will be installed, mirrors can not be installed on the frame. In that case, proceed to Step 2.

- 1.1 Remove and discard the upper door hinge from the driver's side cab frame.
- 1.2 Attach the driver's side mirror to the frame into the hinge holes using two 1/4-20 x 3/4" bolts. See Figure 1.2.
- 1.3 Repeat steps 1.1 and 1.2 for the passenger's side mirror.
- 1.4 Torque bolts to 96±5 inch-lbs.

NOTE: Side Mirror brackets will not be used for a frame install. These parts may be retained if a door and rear window kit may be installed later.

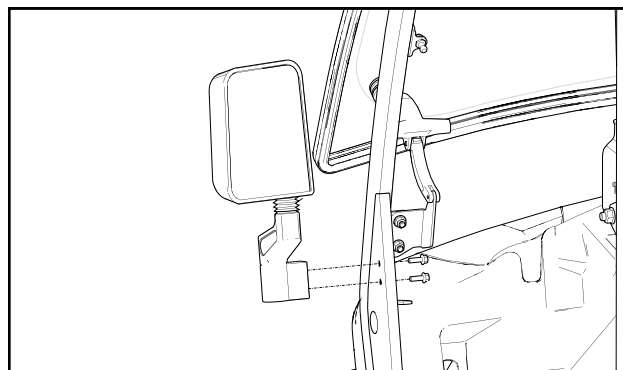


Figure 1.2: Side Mirror to Cab Frame

MIRROR INSTALLATION

2. Carryall 4x2 - On Cab Doors:

- 2.1 Remove rubber plugs from doors in location shown in figure 2.1.
- 2.2 Install mounting adapter to driver's side door of the cab through holes where dome plugs were removed, using 1/4-20 x 3/4" long screws, 1/4" x 1" fender washers, and 1/4-20 lock nuts. See figure 2.2.
- 2.3 Install the driver side mirror to the mounting bracket using 1/4-20 x 3/4" long screws as shown in figure 2.3.
- 2.4 Repeat steps 2.1 through 2.3 to install passenger side mirror.
- 2.5 Torque bolts to 96±5 inch-lbs.

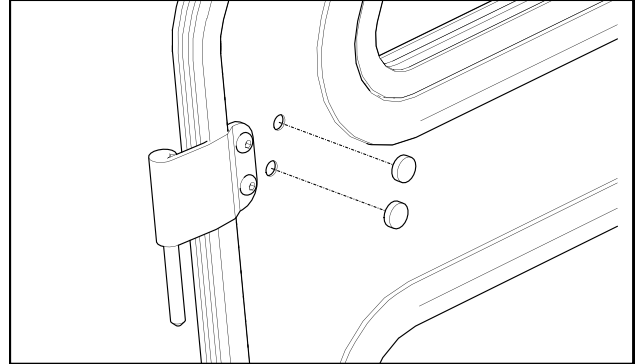


Fig. 2.1

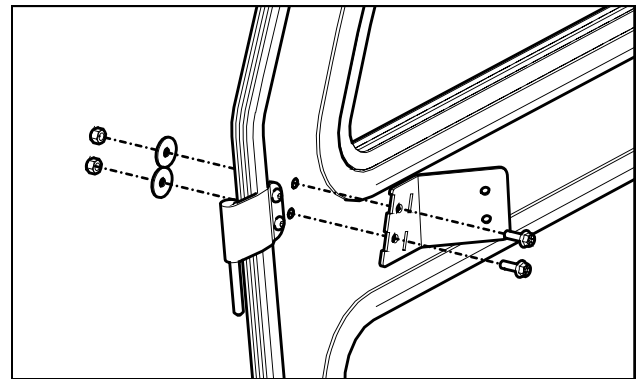


Fig. 2.2

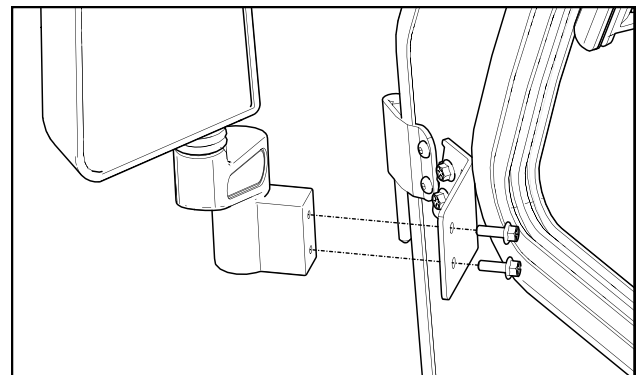


Fig. 2.3

3. Carryall 4x4 - On Cab (Front) Doors:

- 3.1 Remove rubber plugs from doors in location shown in figure 3.1.
- 3.2 Install the driver side mirror to driver's side door of the cab through holes where dome plugs were removed, using 1/4-20 x 3/4" long screws. See figure 3.1.
- 3.3 Repeat steps 3.1 and 3.2 to install passenger side mirror.
- 3.4 Torque bolts to 96±5 inch-lbs.

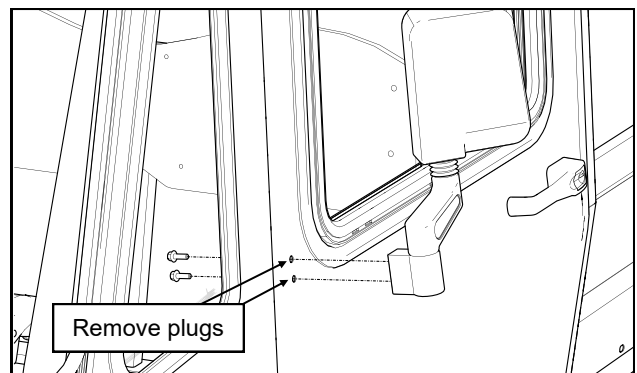


Fig. 3.1

SERVICE PARTS

#	PART NUMBER.	DESCRIPTION	QTY.
1	9SV-PM5L	EXTERIOR MIRROR, LEFT	1
2	9SV-PM5R	EXTERIOR MIRROR, RIGHT	1

