




**SIDE VIEW MIRROR SET
(for ClearView Cabs)
p/n: 9PM6**

The contents of this envelope are the property of the owner.
Be sure to leave with the owner when installation is complete.

Approximate Installation Time *
Experienced Dealer Technician – .5 Hour
Average Dealer Technician – .5 Hour
Do-It-Yourself – .5 Hour

The left mirror attaches to the left bracket shown (use the rubber gasket supplied). Then the assembly attaches to the left door using the original door bolts. See the next page.

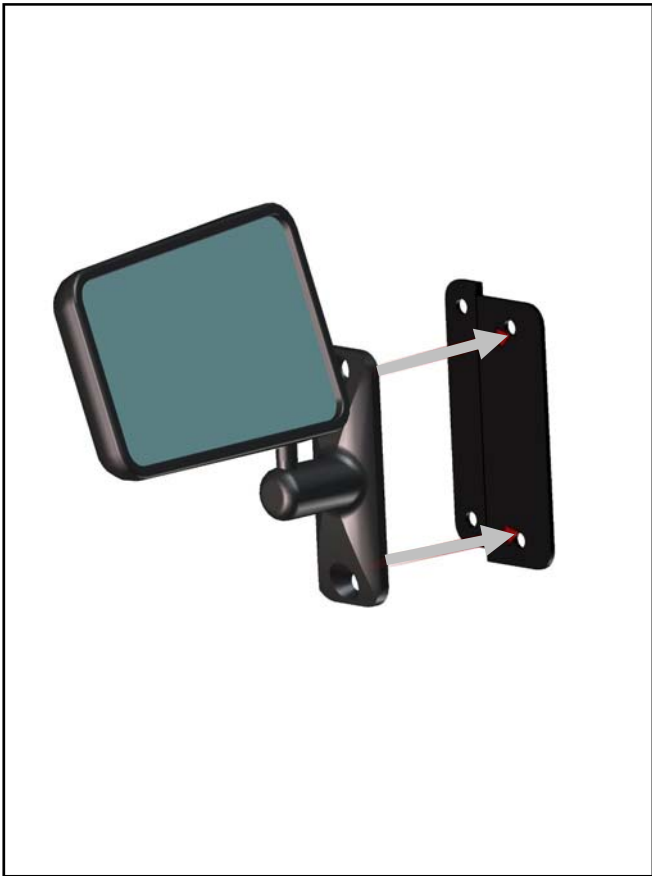

California Proposition 65

⚠ WARNING ⚠

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

revised: 6-28-2016

Attach using the hardware shown (M6). Note: steel washers are optional depending upon the bolt length provided with your kit. Tighten bolts at this time.



Remove screws and washers from the door where shown. Place the mirror assembly onto the door panel. Attach using the same original hardware into the factory installed threaded inserts. **Note:** the bracket can mount to the door two ways. One way the mirror is more upward and forward, the other way the mirror is more downward and rearward. Downward and rearward tends to be more favorable for best viewing. Orient at the installer's discretion.

Repeat for right side.

