



9LEDS1 Strobe Light ROPS-Mount Kit

The contents of this envelope are the property of the owner.
Be sure to leave with the owner when installation is complete.

APPROXIMATE INSTALLATION TIME: 20 Minutes

INSTALLING THE STROBE LIGHT KIT

- A. Attach the strobe light mounting bracket to the ROPS (Roll-Over Protective Structure) using the appropriate U-bolt from the hardware kit and two locknuts from the hardware kit.

NOTE: For mounting to square or rectangular tubing, apply the supplied 1/8" x 1" foam tape per Fig. 1. For mounting to round tubing, use the rubber spacer from the hardware kit per Fig. 2.

- B. Use cable ties to secure the wire harness to the ROPS, and feed the free end of the harness along the ROPS toward the nearest enclosed structure (rear panel, under seat compartment, underside of rear fenders, etc.)

- C. Connect the light to power per the wiring diagram below.

NOTE: The strobe light has three flash patterns available: 1) 5 rapid flashes / off (default); 2) flash on/off; 3) rotating beacon. The light is set to 1 as default, and can be changed by touching the Green wire at the light (located within the wiring near the Switch) to +12v power while the strobe light is active.

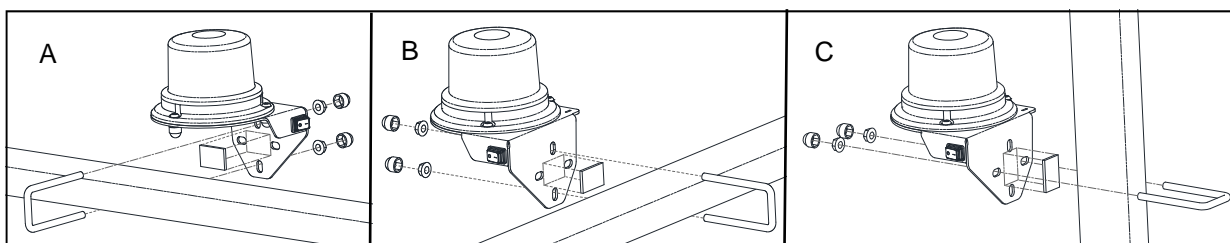


Fig. 1 (rectangular / square bar)

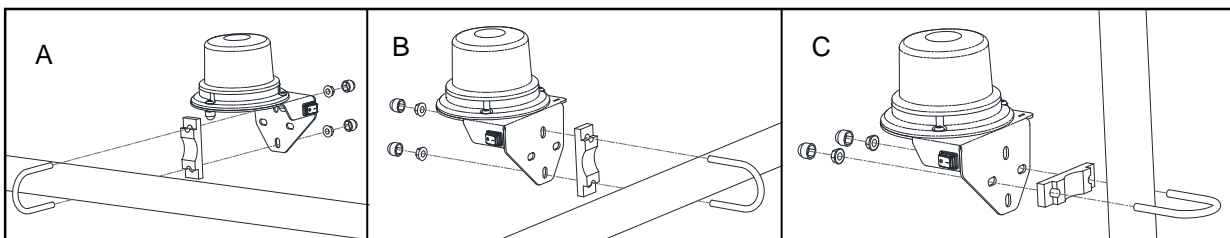


Fig. 2 (round bar)

Service parts:
 Light: **9LEDS-A** Strobe light, LED, Amber
 Bracket: **KBRSL-01**
 Switch: **9RSM**
 Wiring Harness: **KBRWL-WH1**
 Wiring Kit: **9PWK-ACC**
 Hardware Kit: **KBRSL-HWK**

