




**John Deere 2 Family  
Seal Kit  
P/N: 9JD2FSK  
Fits Tractor Models: 2032 & 2038R**

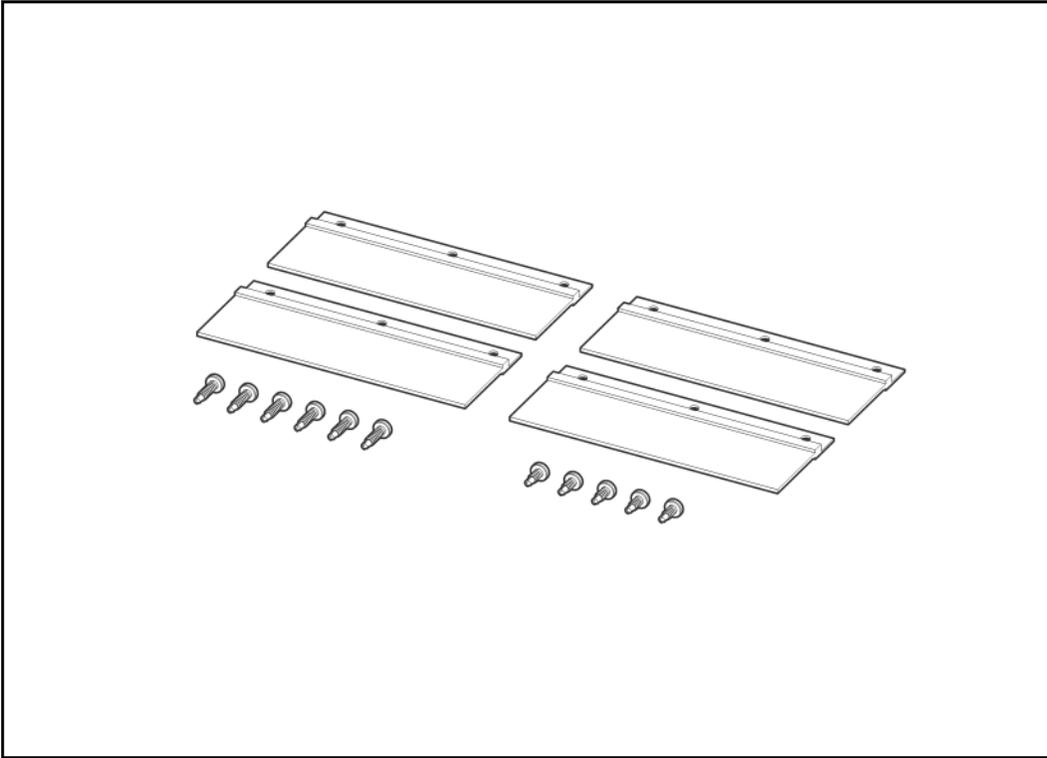

The contents of this envelope are the property of the owner. Leave with the owner when installation is complete.

Rev. A, 08/24/2017

p/n: IM-9JD2FSK

# TABLE OF CONTENTS

WARNINGS, TIPS, & REQUIRED TOOLS..... 3  
SEAL KIT INSTALLATION..... 4

## WARNINGS, TIPS, & REQUIRED TOOLS

*Curtis cabs feature an assembly of parts designed for your vehicle which require adjustment and alignment of components to accommodate vehicle variations and provide proper weather protection. For accurate installation, proper operation, and years of satisfaction, please read and understand the installation and owner's manual fully prior to installing the seal kit.*

*From all of us at Curtis, we thank you for choosing our product.*

	<h3>NOTICE</h3>
<p><b>Curtis Cabs, blades and general accessories add additional weight to the base vehicle. All Curtis accessory weights are listed in product brochures. Deduct the accessory's total weight from the vehicle's rated capacity and never exceed the vehicle's rated capacity including driver and passenger.</b></p>	

**▲ WARNING** *Exposure to Carbon Monoxide can Cause illness, serious injury or death. Never operate vehicle if suspicious of Carbon Monoxide. Inspect exhaust system for leaks monthly. Leaks can result from loose connections, corrosion, cracks or other damage to the exhaust manifold. If leaks are found, repair or replace exhaust system. Do not use vehicle until repair or*

 <h2>WARNING</h2>	
<h3>Serious Injury or Death</h3>	
	<p>This cab enclosure does not provide protection from rollover or other accidents.</p>
	<p>This cab enclosure does not provide protection from flying objects including golf balls.</p>
	<p>This cab enclosure does not provide protection from lightning. When lightning threatens take cover and do not operate vehicle.</p>

**California Health and Safety Proposition 65 Warning:** This product may contain chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

## GENERAL INFORMATION BEFORE YOU START

### HELPFUL HINTS:

- Read and understand all instructions before beginning.

### TOOLS REQUIRED:

- Drill/Driver
- #2 Phillips Head Bit

# SEAL KIT INSTALLATION

## STEP 1: (SORT SCREWS)

1.1 Included in this kit are two different lengths of self drilling screws. The shorter screws (1/2" long) are to be used in the pre-drilled cab A-pillar floorboards, and the longer screws (3/4" long) will be used in the vehicle floorboard through the rubber mat.

## STEP 2: (LEFT BRUSHES)

**Note:** Orient all brushes so the flatter of the two sides mates to the mounting surface.

2.1 Start by attaching a brush in front of the brake pedals with the shorter 1/2" self drilling screws in the pre-drilled A-pillar holes. See Figure 2.1. One hole of the brush will overhang the floorboard and does not need a screw.

**Hardware Used** Qty  
#10 x 1/2" Pan Head Screw 2

**Tools Required**  
#2 Phillips bit and a drill/driver

2.2 Line up a brush behind the pedals so that it closes as much of the remaining gap as best as possible and secure with longer 3/4" self drilling screws. See Figure 2.2.

**Hardware Used** Qty  
#10 x 3/4" Pan Head Screw 3

**Tools Required**  
#2 Phillips bit and a drill/driver

## STEP 3: (RIGHT BRUSHES)

3.1 Start by attaching a brush in front of the pedals with the shorter 1/2" self drilling screws in the pre-drilled A-pillar holes. See Figure 3.1.

**Hardware Used** Qty  
#10 x 1/2" Pan Head Screw 3

**Tools Required**  
#2 Phillips bit and a drill/driver

3.2 Line up a brush behind the pedals so that it closes as much of the remaining gap as best as possible and secure with longer 3/4" self drilling screws. See Figure 3.2.

**Hardware Used** Qty  
#10 x 3/4" Pan Head Screw 3

**Tools Required**  
#2 Phillips bit and a drill/driver



Fig. 2.1 (Attach Front Brush)



Fig. 2.2 (Attach Rear Brush)



Fig. 3.1 (Attach Front Brush)

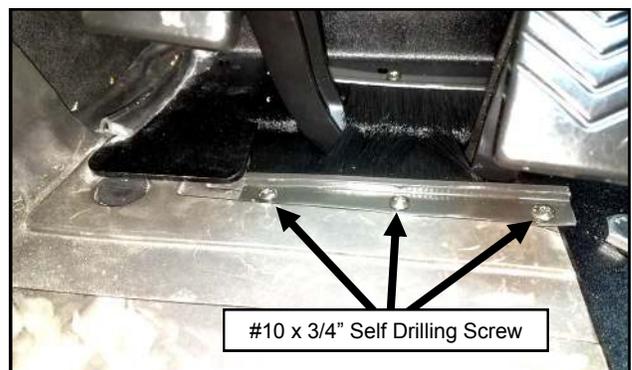


Fig. 3.2 (Attach Rear Brush)