

MODEL: KAWASAKI MULE 3000 DOOR KIT INSTALLATION INSTRUCTIONS

HARD SIDED DOOR (p/n KAF30-006 (RED)-007 (GREEN) & SOFT SIDED DOOR (p/n KAF30-008 (RED)-009 GREEN)

NOTE: *If installing a door and rear panel kit at the same time as the cab, follow the cab instructions to install the rear panel. If cab is already completely installed follow these instructions.*

STEP 1: Installing the REAR WINDOW **(Hard Sided Cab Only)**

- A.** Remove the carriage bolt from the back of the **unitized side frame** installed to the **roof**. Save for later re-installation. Repeat on opposite side. (See fig A.)

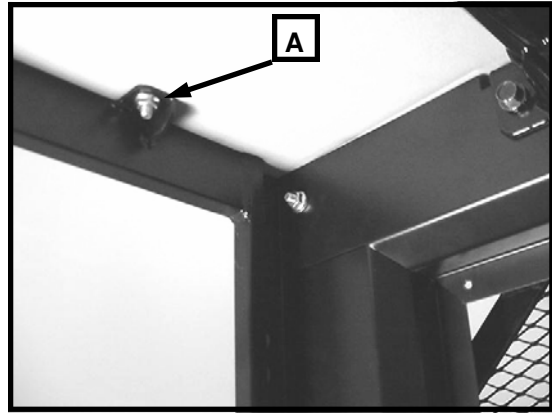


fig A

- B.** Remove the two bolts from the **roof** back that are installed to the screen and cab bar. Save for later re-installation.

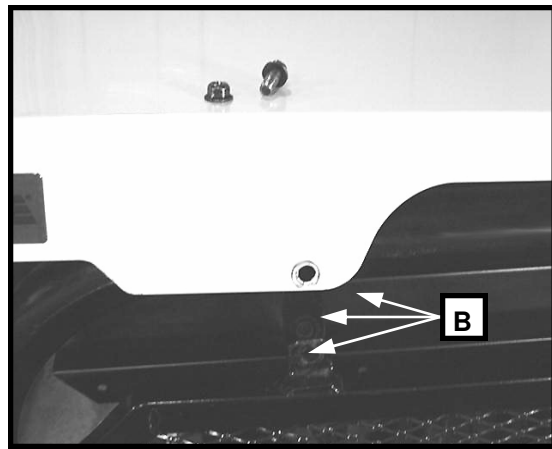


fig B

- C.** Remove the top nut from the seat back and loosen the bottom nut. Repeat on opposite side. Save the removed hardware for later re-installation.

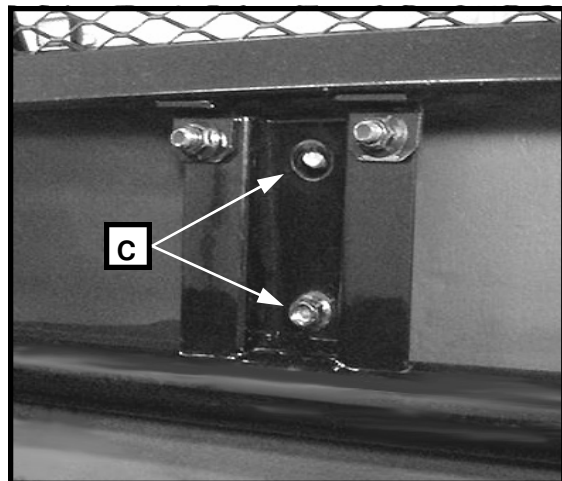


fig C

STEP 1: Installing the REAR WINDOW
(cont'd) (Hard Sided Cab Only)

- D.** Install **1/2" weather seal** on the two inside metal strips of the rear screen.
- NOTE:** Clean surface before applying **1/2" weather seal**. Apply at room temperature.



fig D

- E.** Install the **rear window** in-between screen and back of cab enclosure, sliding the **rear window** down with **bulb rubber** facing forward so that the cutouts go into the seatback brackets. **(See fig E)**
- NOTE:** Be sure that the **rear window** is completely seated against the lower cross bar.



fig E

- F.** Re-install all removed hardware. Fasten all hardware securely.
- NOTE:** Be sure that the screen brackets are reinstalled inside the **roof**. **(See fig F)**

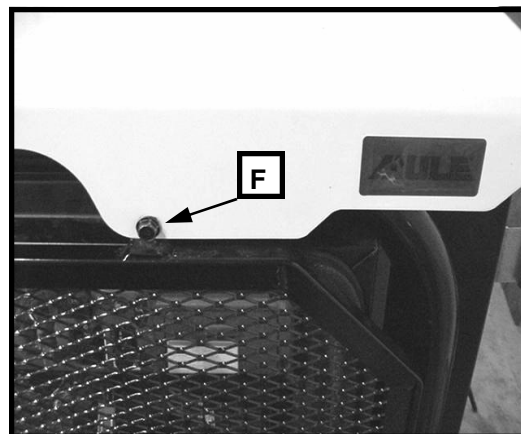


fig F

NOTE: If installing a door and rear panel kit at the same time as the cab, follow the cab instructions to install the rear panel. If cab is already completely installed follow these instructions.

STEP 2: Installing the REAR WINDOW **(Soft Sided Cab Only)**

- A.** Remove the top nut from the seat back and loosen the bottom nut. Repeat on opposite side. Save the removed hardware for later re-installation.

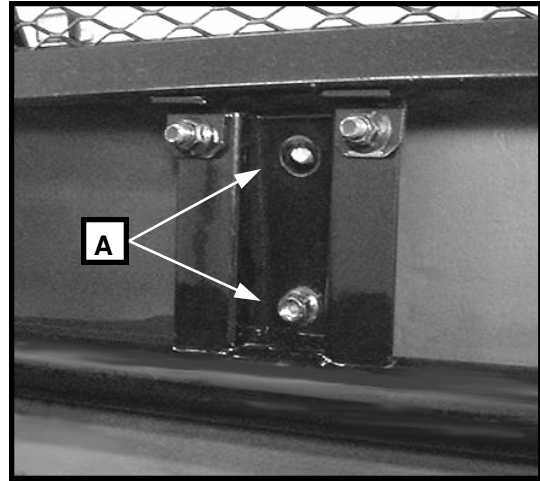


fig A

- B.** Install bolt on **snaps** to the holes of the cab enclosure around the screen area, with the snaps facing inward. (See fig B.)

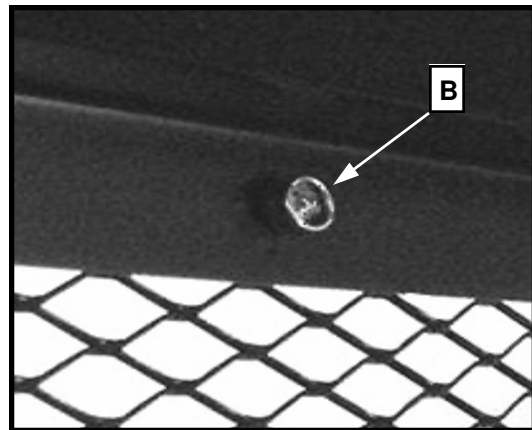


fig B

- C.** Install the **rear window** by snapping into place. **Velcro** the **rear window** to the cab bar. (See fig H.)

NOTE: Clean surface before applying **Velcro**.
Apply at room temperature.



fig C

STEP 3: INSTALLING DOORS

- A.** Install the **outside rotary latch handle** to the **door** (See fig A.) using 6 mm x 12 mm long bolts, and 6 mm internal tooth lock washers

Install the **rotary latch handle** (See fig A) using 1/4"-20 x 1" bolts and 1/4"-20 nylon locknuts.

NOTE: Leave **rotary latch handle** loose.

Install **1" Heyco Plug** to the middle door stiffener over the rear handle bolt hole. The **1" Heyco Plug** is included in the hardware kit.

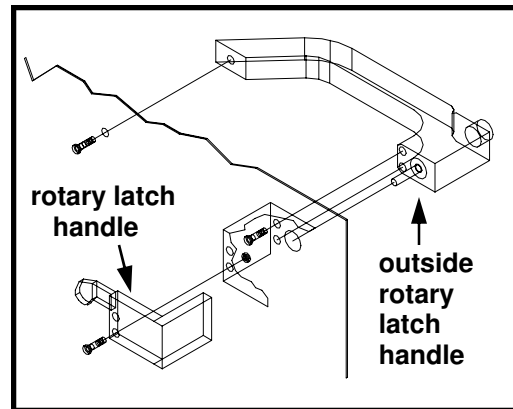


fig A

- B.** Install the **doors** to the cab by sliding the **hinge sleeves** on the **door** onto the **pin hinges** on the **unitized side frame**. Work the doors back and forth until the **hinge sleeves** are completely seated. Adjust **hinges** to align door with unitized side frame.

- C.** Adjust **rotary door latch** and **striker** to compress the rubber seal all around the perimeter of the **door**. When adjustment is complete, re-tighten all hardware.

- D.** Install **door stop cable (hard sided cab only)** to the top of the door and the top of the **unitized side frame** (See fig D.) using 5/16"-18 x 3/4" bolts, 5/16" nylon locknuts, and 5/16" SAE flat washers, included in the hardware kit.

NOTE: Lubricate rotary latch and plunger often with spray lubricant.

NOTE: Re-tighten all bolts after 40 hours of operation and every 100 Hours thereafter.



fig B


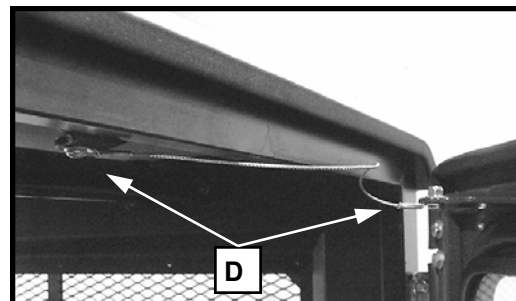


fig D


KAWASAKI MULE 3000 AS DOOR PARTS LIST (P/N KAF30-006 (RED) -OO7 (GREEN))

REAR PANEL	QTY.	P/N
	1	KA3000-06

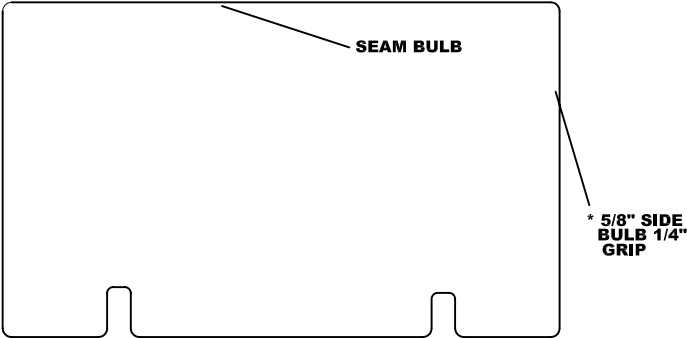


HARD SIDED DOORS	QTY.	P/N
LEFT DOOR	1	KA3000-07L (R or G)
RIGHT DOOR	1	KA3000-07R (R or G)

R = RED
G = GREEN

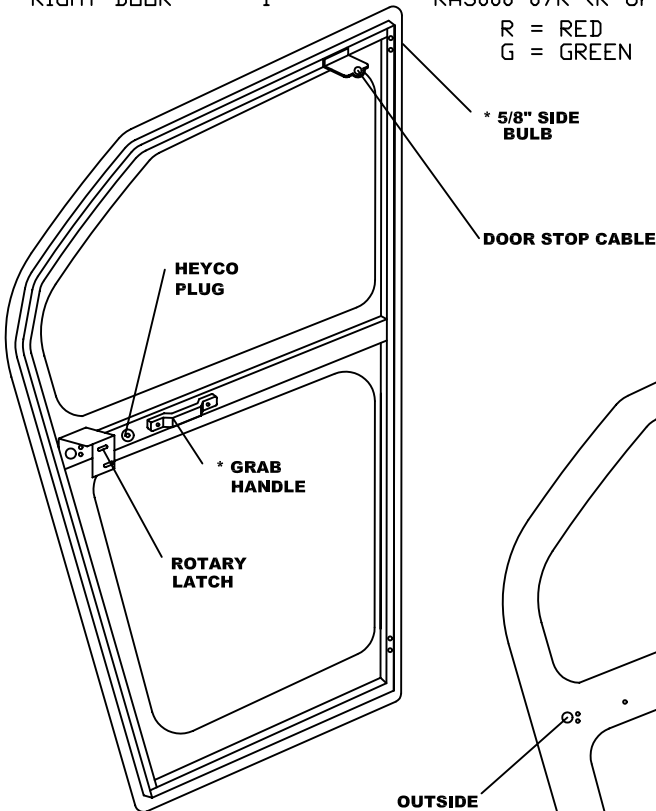


* IN HOUSE APPLICATION

QTY/UNIT	P/N	DESCRIPTION
1	9SW-M3L	LEFT SLIDING WINDOW
1	9SW-M3R	RIGHT SLIDING WINDOW
1	PG-3000LD	LOWER DOOR WINDOW
1	9PH006	UNITIZED FRAME HINGE KIT-LH
1	9PH005	UNITIZED FRAME HINGE KIT-RH
1	9DL01A	ROTARY DOOR LATCH LH
1	9DL01B	ROTARY DOOR LATCH RH
1	9DL01C	OUTSIDE LATCH HANDLE W/KEY
1	9PR17	5/8" SIDE BULB
1	9PR23	5/8" SIDE BULB W/ 1/4" GRIP
1	9DS02	CABLE DOOR STOP (13 7/8" LONG)

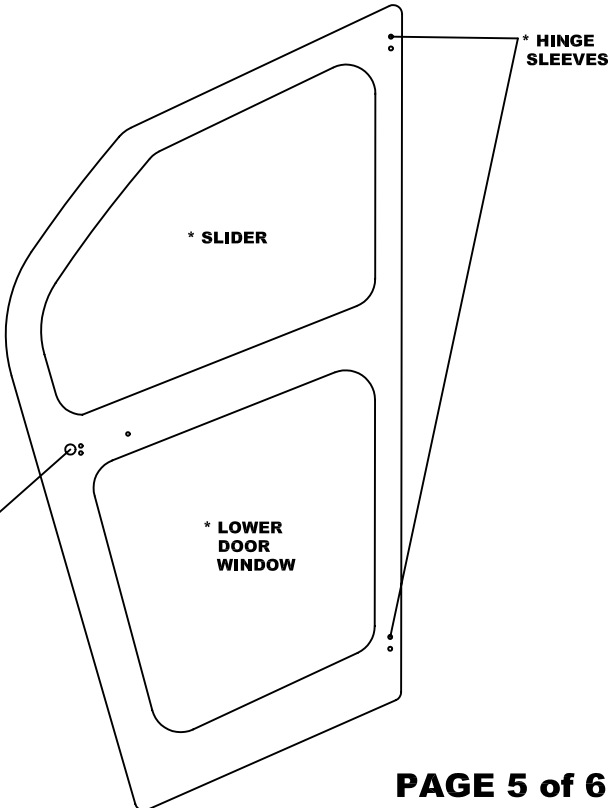


KAWASAKI MULE 3000 SS DOOR PARTS LIST (P/N KAF30-008 (RED)-009 (GREEN))


REAR CURTAIN	QTY.	P/N
	1	KA3000-014

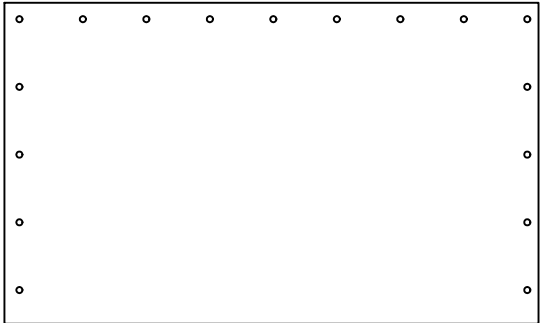

SOFT SIDED DOORS	QTY.	P/N
LEFT DOOR	1	KA3000SS-07L (R or G)
RIGHT DOOR	1	KA3000SS-07R (R or G)
		R = RED
		G = GREEN

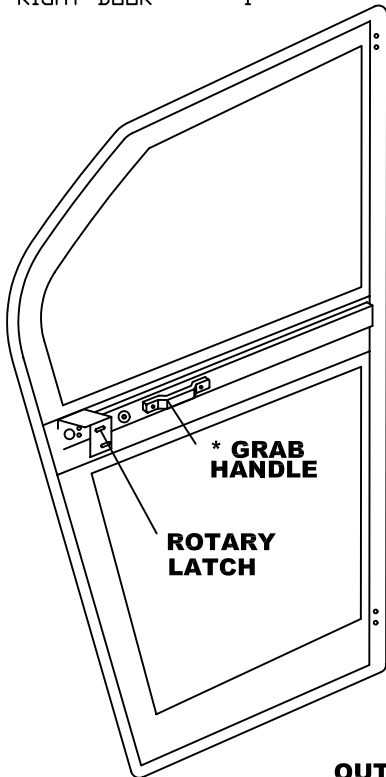

* 5/8" SIDE
BULB

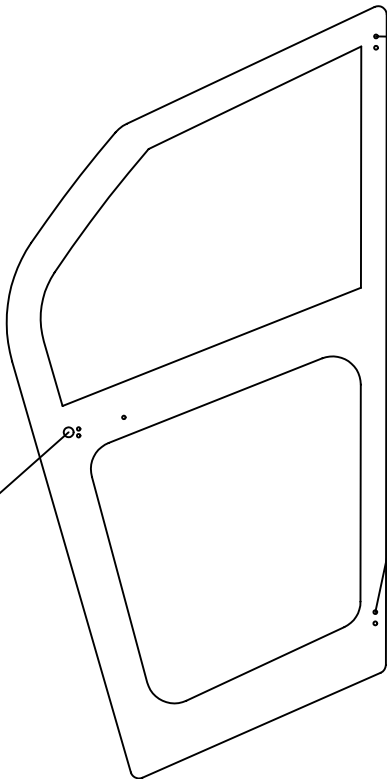

OUTSIDE
HANDLE

* HINGE
SLEEVES

ADDITIONAL SERVICE PARTS	
QTY/UNIT	P/N
1	9PH006
1	9PH005
1	9DL01A
1	9DL01B
1	9DL01C
1	9PR23
1	KA3000-015L (R or G)
1	KA3000-015R (R or G)
1	9SS02
DESCRIPTION	
UNITIZED FRAME HINGE KIT-LH	
UNITIZED FRAME HINGE KIT-RH	
ROTARY DOOR LATCH LH	
ROTARY DOOR LATCH RH	
OUTSIDE LATCH HANDLE W/KEY	
5/8" SIDE BULB W/ 1/4" GRIP	
DOOR SKIN LEFT	
DOOR SKIN RIGHT	
STUD SNAPS W/ NUTS	

* IN HOUSE APPLICATION