



**KUBOTA L3800, L3901, and L2501
Backhoe Compatibility Kit
p/n: 1KL38BCK
Installation Instructions**

The contents of this envelope are the property of the owner.
Be sure to leave with the owner when installation is complete.

APPROXIMATE INSTALLATION TIME: 30 minutes



A hard sided cab is shown. A soft rear curtain is used when backhoe compatibility is required on a hard sided (all steel) cab.

1. REAR CROSS BRACE

1.1 If a roof is already installed, temporarily remove the roof (with assistance).

1.2 Per fig. 1.2 (and with assistance), install the rear cross brace oriented so snaps for the rear curtain are inside the cab. Use the following hardware to attach the brace to the top rear of each side frame: one 5/16" x 3/4" long button head bolt, one plastic washer, and one locknut. The head of the bolt and the plastic sealing washer are to be on the outboard/rear side of the cab enclosure. Repeat for right side frame attachment then tighten both bolts.

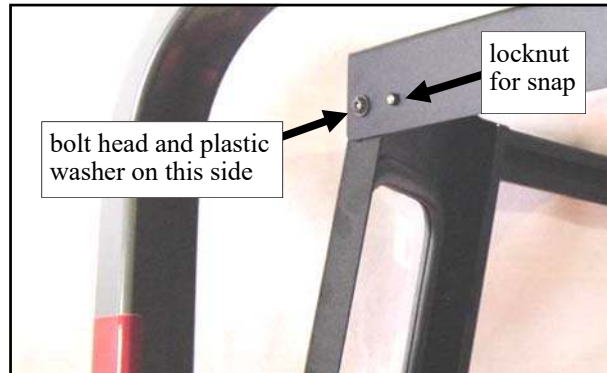


Fig. 1.2 (view from right side of tractor)

2. REAR CURTAIN

2.1 Per fig. 2.1, engage the snaps on the rear curtain to the factory installed snaps on the rear cross brace.

2.2 Per fig. 2.2, the long left and right vertical sides of the rear curtain are to be Velcroed to the inside surface of the sheet metal. Note: for best adhesion, apply Velcro to surfaces that are clean, dry, and at room temperature.

2.3 If a roof was temporarily removed, re-install now.

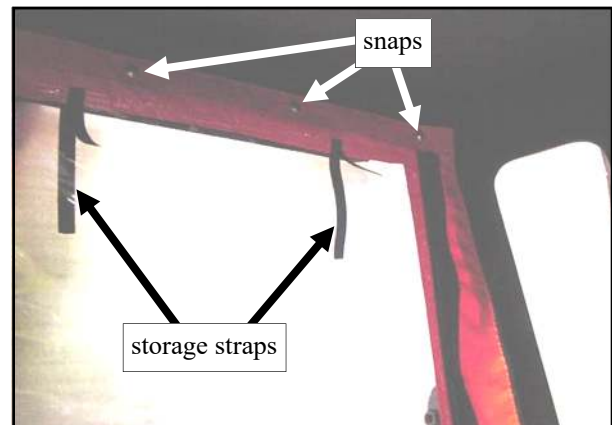


Fig. 2.1 (view from right side of tractor)

3. CARE AND MAINTENANCE

3.1 Vinyl components should be washed with a mild solution of warm soapy water.


3.2 Clear vinyl can be easily scratched. Be careful cleaning frost or snow from rear curtain. Do not roll curtain in cold weather. The curtain becomes stiff and may crack. Keep curtain clean.



Fig. 2.2 (view from right side of tractor)

8SV SERVICE PARTS

REAR CURTAIN	QTY.	P/N
ORANGE VINYL	1	8SV-KL3203-VK

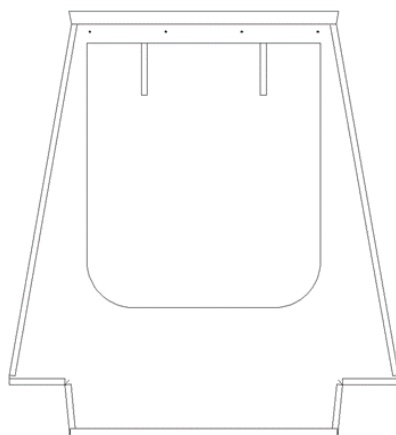

REAR CROSS BRACE	QTY.	P/N
T-BLACK	1	8SV-KL3205-B4

