



**Massey Ferguson 1700E
Adaptor Kit (p/n: 1MF1700EAK)
fits tractor models with L105E newer model loaders**

While this kit was designed to fit on the vehicle(s) listed above, manufacturing tolerances and vehicle assembly may affect fitment. It is the responsibility of the cab installer to check all vehicle pedals and levers for full functionality and, as required, adjust the cab fitment to prevent any interference of the cab components with the travel of pedals or levers.



**Does not fit Late Model SCV
With Quick Connects on top.**



**Fits New Model SCV with Quick
Connects in front.**

The contents of this envelope are the property of the owner. Leave with the owner when installation is complete.

CAB INSTALLATION

STEP 1: Use these instructions in place of Step 20 in cab instructions

- 1.1 Pre-install the supplied Velcro to the loader control filler. Leave the release tape on until the filler is in place.
- 1.2 Loosen the lower screw securing the right side of the cowl so the filler can be installed between the cowl and right side frame.
- 1.3 Slide the filler over the loader control lever and set into place. See Figure 1.3. NOTE: If the filler does not align well with the loader control valve, loosen the mounting bolts for the loader control valve and adjust its position. The top edge of the filler attaches to the inside of the cowl, while the right side, bottom, and left side transition to the outside of the cab and vehicle.
- 1.4 Make sure the top edge of the filler overlaps the cowl enough and then secure the side of the filler to the side frame tube. See Figure 1.4.
- 1.5 Secure the top edge of the filler to the Cowl. See Figure 1.5. Curl the inner edge and transition it to the outside of the vehicle under the rubber cowl flap.
- 1.6 Line up the inner edge of the filler to the front of the gray plastic vehicle cowl and secure. See Figure 1.6.

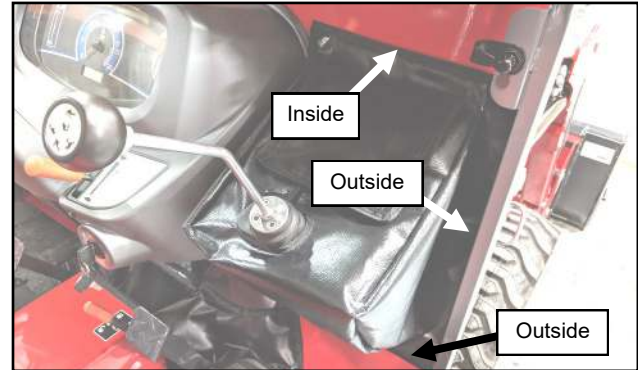


Fig. 1.3 (Set The Loader Control Filler Into Place)

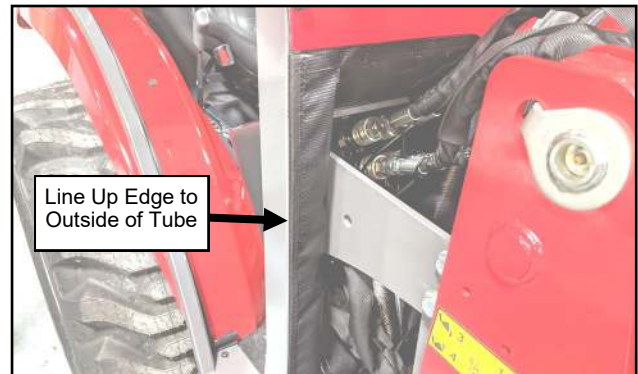


Fig. 1.4 (Secure Side Of Filler)



Fig. 1.5 (Transition Filler To Outside)

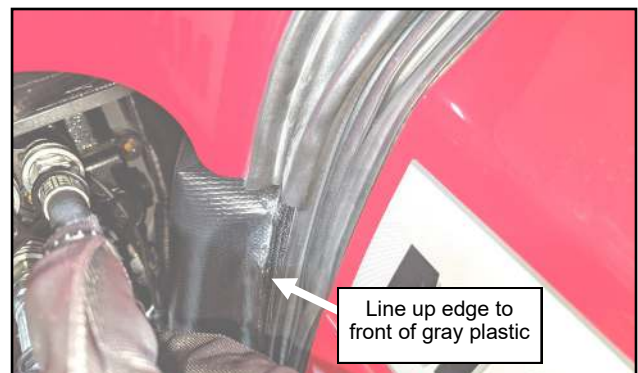


Fig. 1.6 (Line Up Edge Of Filler)

CAB INSTALLATION

STEP 1: (CONTINUED)

- 1.7 Line up the inner edge of the filler to the front of the gray plastic vehicle cowl and secure. See Figure 1.7. Transition the filler to the right Front Leg.
- 1.8 Secure the bottom edge of the filler. See Figure 1.8.
- 1.9 Finally secure the filler to the loader control applying Velcro around cutout for decal. See Figure 1.9.
- 1.10 Tighten the lower screw securing the right side of the cowl.

Return to cab installation instructions.

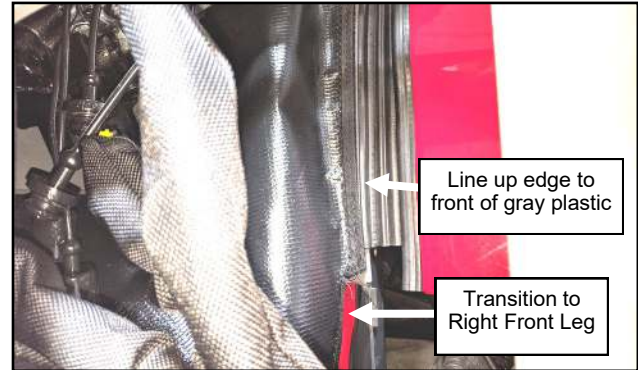


Fig. 1.7 (Transition Filler To Outside)

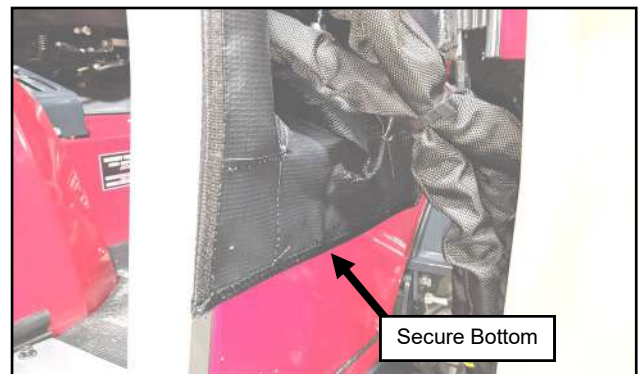


Fig. 1.8 (Secure Bottom Of Filler)



Fig. 1.9 (Secure Around Decal)