



John Deere Gator TS Windshield Kit p/n: 1WS1

Canopy Kit (p/n: 1CT2) is required for the installation of this kit

The contents of this envelope are the property of the owner. Be sure to leave with the owner when installation is complete.

APPROXIMATE INSTALLATION TIME: 1/2 HOUR

TOOLS REQUIRED: Rubber mallet




NOTICE

Curtis Cabs, blades and general accessories add additional weight to the base vehicle. If Curtis accessory weights are listed in product brochures. Deduct the accessory's total weight from the vehicle's rated capacity and never exceed the vehicle's rated capacity including driver and passenger.

!WARNING: Remove windshield before transporting on an open trailer!





P R T S I N K I T

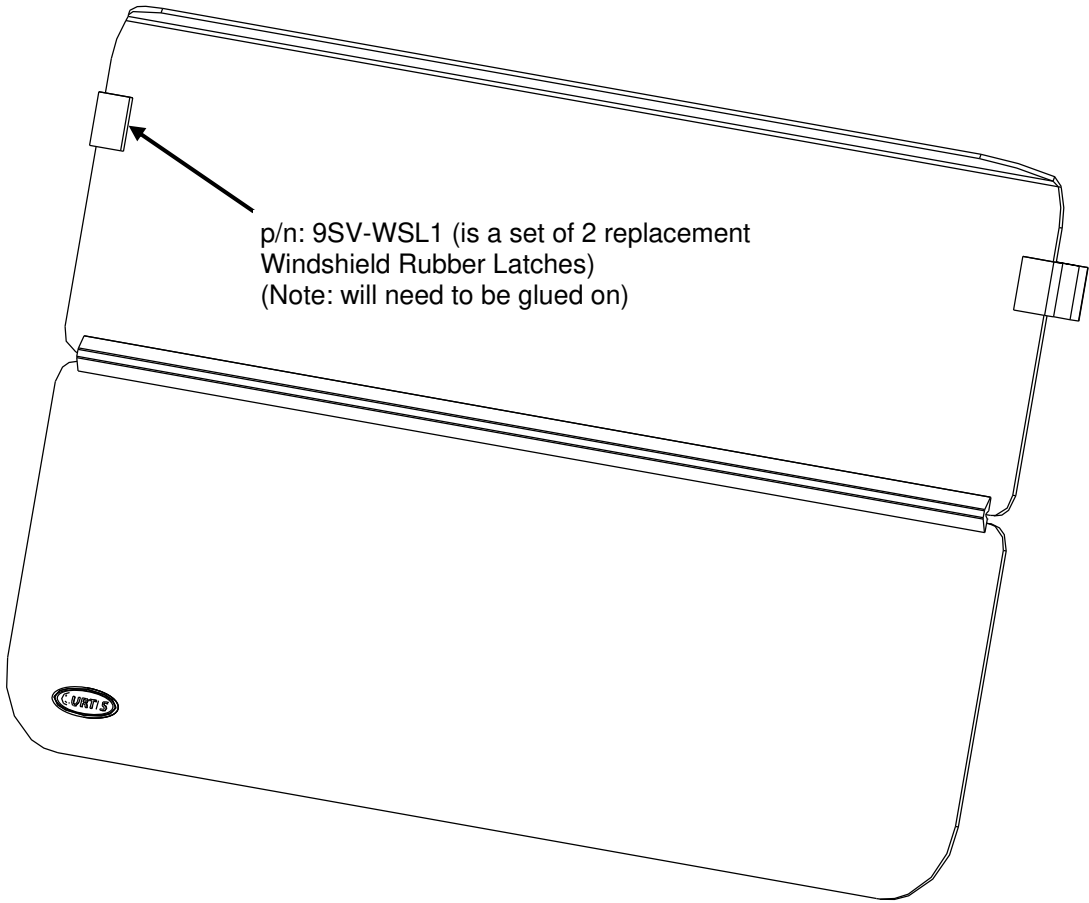

HARDWARE BAG (9SV-JG411MK)



INSTRUCTIONS



Step 1 Assembly

- 1.1 Peel the plastic back from the sides and bottom of the windshield.
- 1.2 Per figure 1.2, position the windshield clips in the approximate center of the sides of the lower window. Use the rubber mallet to seat the clip within an 1/8" of the edge of the windshield.
- 1.3 Per figure 1.3, install both windshield latch clips on the bottom of the lower windshield, approximately 7" in from the sides. Seat fully with rubber mallet.



Fig. 1.2

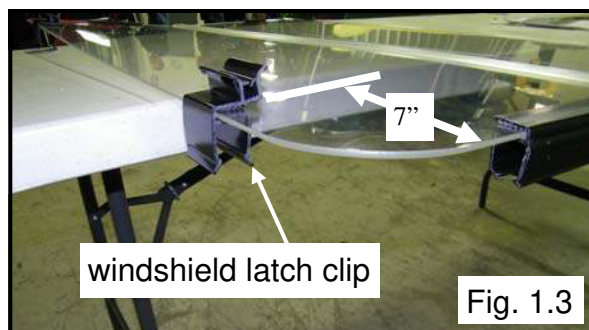


Fig. 1.3

Step 2 Installation

- 2.1 Fold the upper windshield over and press the upper flange into the latch clips on the lower windshield.
- 2.2 Per figure 2.2, position the windshield over the canopy front support tube structure and snap the latch clips and side clips over the tubing.
- 2.3 Unfold the upper windshield and use the rubber latches to secure to the canopy front support in the closed position.

Note: If the top of the windshield contacts the canopy, push straight up on the front edge of the canopy near each corner. The holes in the canopy allow for a lot of adjustment between the supports and the canopy.



Fig. 2.2



Fig. 2.3

⚠ WARNING: Remove windshield before transporting on an open trailer!