

CAB INSTALLATION INSTRUCTIONS

KUBOTA BX 1850/2350/2660
HARD SIDED CAB ENCLOSURE (p/n 1KBX50AS)
SOFT SIDED CAB ENCLOSURE (p/n 1KBX50SS)

The contents of this envelope are the property of the owner. Be sure to leave with the owner when installation is complete.


APPROXIMATE INSTALLATION TIME: 2 to 3 HOURS





NOTE: soft sided cab shown with the following accessories: Standard (included with cab): front windshield wiper.

Optional (purchased separately): work lights, strobe light, 20,000 B.T.U. heater, and/or a glass rear panel assembly.

(revised: 10/29/2014) p/n: IM-1KBX50

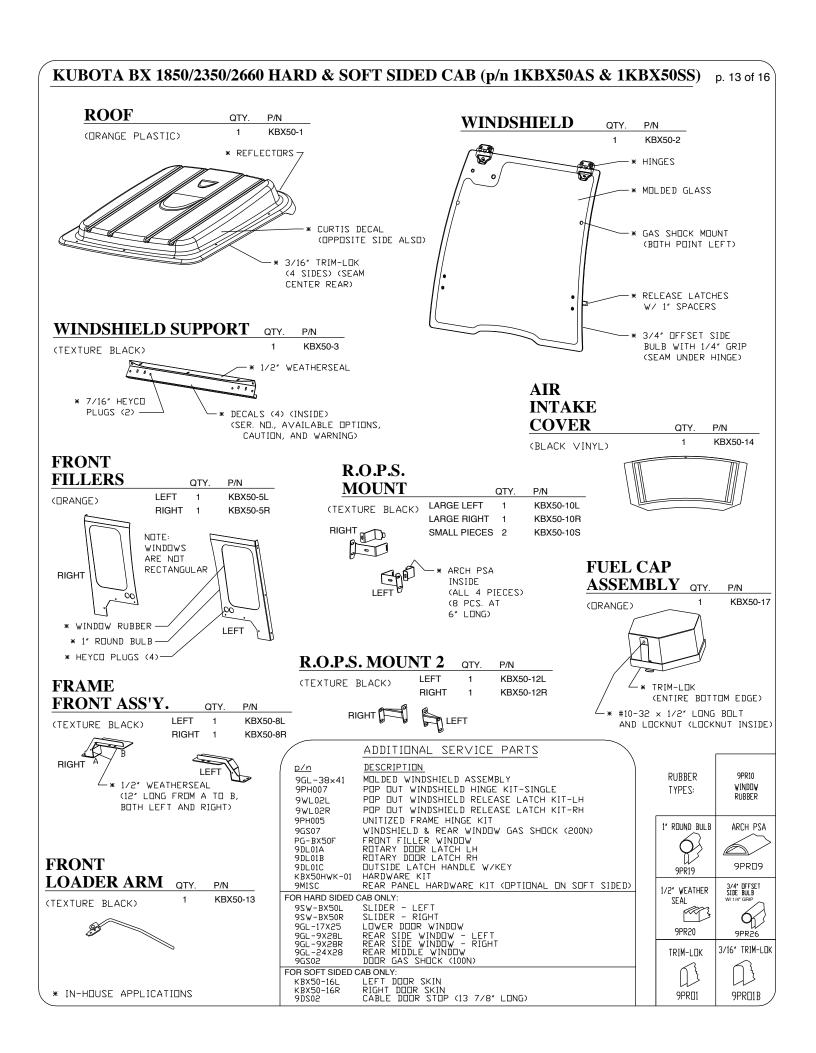

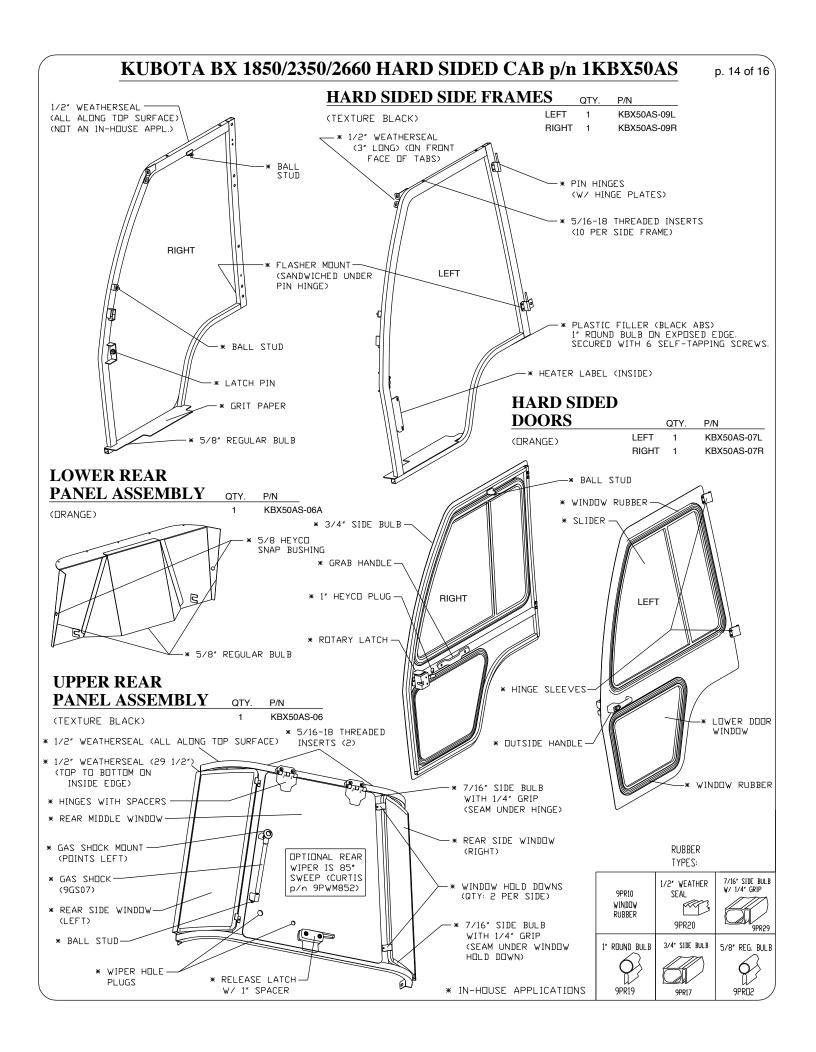

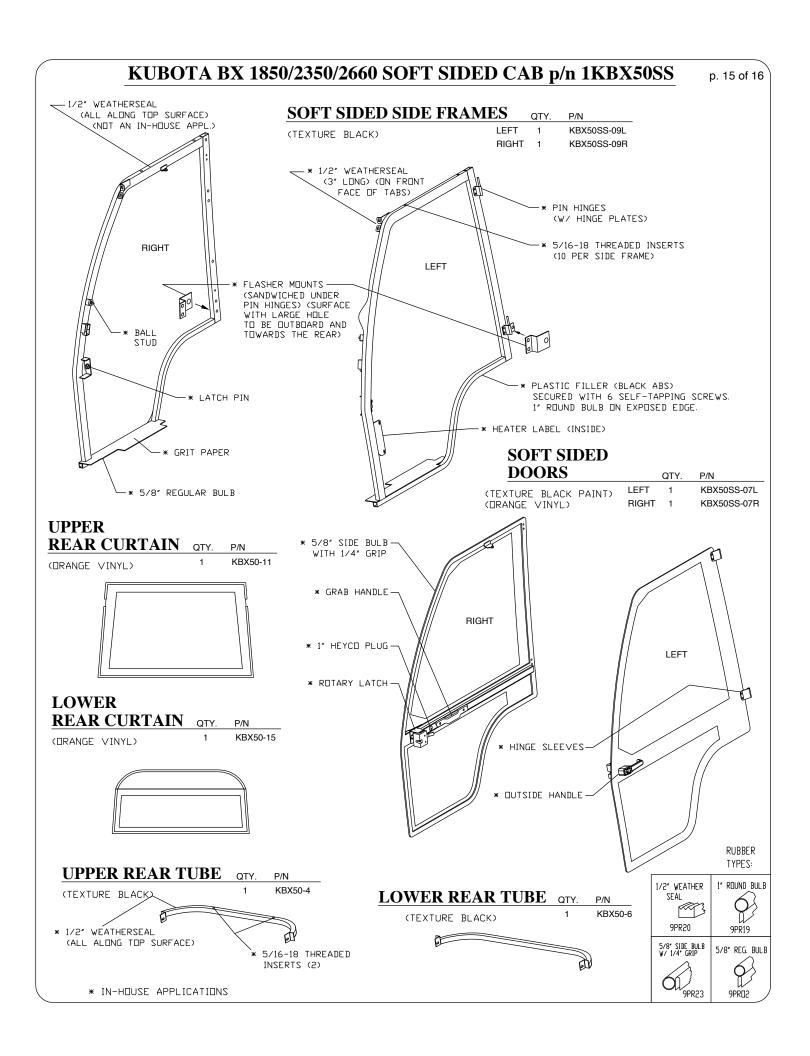


p. 16 of 16


KUBOTA BX 1850/2350/2660

OPTIONAL REAR PANEL KIT FOR SOFT SIDED CABS

(p/n KBX50-06)

(contains the upper and lower assemblies and five self-drilling screws)
(does not include a rear wiper)

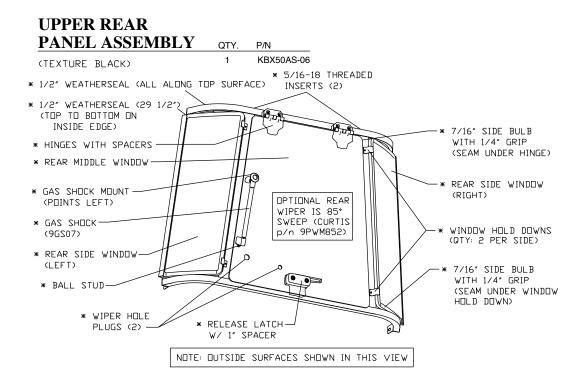

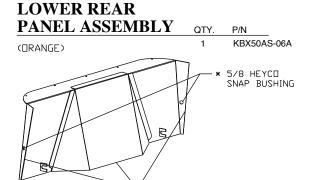

-* 5/8" REGULAR BULB

REAR PANEL HARDWARE KIT

06 - #10 x 5/8" LONG PAN HEAD, PHILLIPS HEAD SELF-DRILLING SCREWS

> RUBBER Types:

1/2* WEATHER SEAL 7/16* SIDE BULB W/ 1/4* GRIP 9PR20 9PR29

5/8* REG. BULB 9PR10 WINDDW RUBBER 9PR12

* IN-HOUSE APPLICATIONS