



## INSTALLATION MANUAL COMPLETE SOFT SIDE CAB KIT (77700-12652) KUBOTA RTV520

(Not for use on RTV500)

These instructions are for installation of the complete cab as well as the modular components.

### CALIFORNIA PROPOSITION 65



**WARNING:**

Cancer and reproductive harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

### BEFORE INSTALLING CAB

- Read all instructions and safety instructions in this manual.
- Refer to your machine's operator's manual and safety instructions on your machine's safety decals.
- Wear appropriate personal protective equipment (PPE) when performing work.
- Hang a **"DO NOT OPERATE"** tag in operator station.



### WARNING

To avoid personal injury or death:

- Cabs, blades, and general accessories add additional weight to the base vehicle. Deduct the accessory's total weight from the vehicle's rated capacity including passenger and driver. Never operate the vehicle outside of its rated weight capacity.
- Exposure to Carbon Monoxide can cause illness, serious injury, or death. Never operate vehicle if suspicious of Carbon Monoxide. Inspect exhaust system for leaks monthly. Leaks can result from loose connections, corrosion, cracks, or other damage to the exhaust manifold. If leaks are found, repair or replace exhaust system. Do not use vehicle until repair or replacement is complete.
- This cab does not provide protection from: a rollover (or other accidents), from flying objects (including golf balls), or from lightning. When lightning threatens, take cover and do not operate vehicle.


**Estimated assembly time: 2 hours (excluding any accessories)**



# ■ PARTS LIST

Ref. No.	Part No.	Part Name	QTY	REMARKS
1	77700-02492	ROOF (INCLUDES EDGE TRIM)	1	Code No.: KB5SS-01
2	70000-01050	TRIM-LOK EDGE TRIM	1	Code No.: 9PR01-220 (220")
3	77700-02493	WINDSHIELD SUPPORT	1	Code No.: KB5SS-03
4	77700-01056	EXPAND-A-FOAM	1	Code No.: 9PR30 (29")
5	77700-02494	REAR ROOF SUPPORT	1	Code No.: KB5SS-04
6	77700-02495	WINDSHIELD ASSEMBLY	1	Code No.: KB5SS-02
7	77700-02496	WINDSHIELD (HARD COATED PC ONLY)	1	Code No.: PCQ-47X38
8	70000-01040	WINDSHIELD HINGE	2	Code No.: 9PH007 (1 PC.)
9	77700-02497	WINDSHIELD HINGE SPACER BLOCKS (SHORT)	2	Code No.: 9BLK01-S (SET OF 2)
10	77700-01048	5/8" BULB RUBBER	1	Code No.: 9PR02 (170")
11	70000-01041	3/4" SIDE BULB RUBBER	1	Code No.: 9PR17 (130")
12	77700-01021	LATCHES	1	Code No.: 9RFL (SET OF 2)
13	77700-02498	GAS SPRING	1	Code No.: 9GS01 (SET OF 2)
14	77700-02499	REAR VINYL CURTAIN	1	Code No.: KB5SS-06
15	77700-01059	BUSHINGS	1	Code No.: T-KB5BUSH (SET OF 4)
16	77700-02500	HARDWARE KIT (FOR CAB)	1	Code No.: KB5SS-HWK
17	77700-01052	HARDWARE KIT (NEW HARDWARE FOR WS)	1	Code No.: KU500WS-HWK
18	77700-12811	RTV 520 SS CAB INSTALL INSTRUCTIONS	1	Code No.: 9SV-IM-KUB520SS (NSS)

NSS: Not sold separately

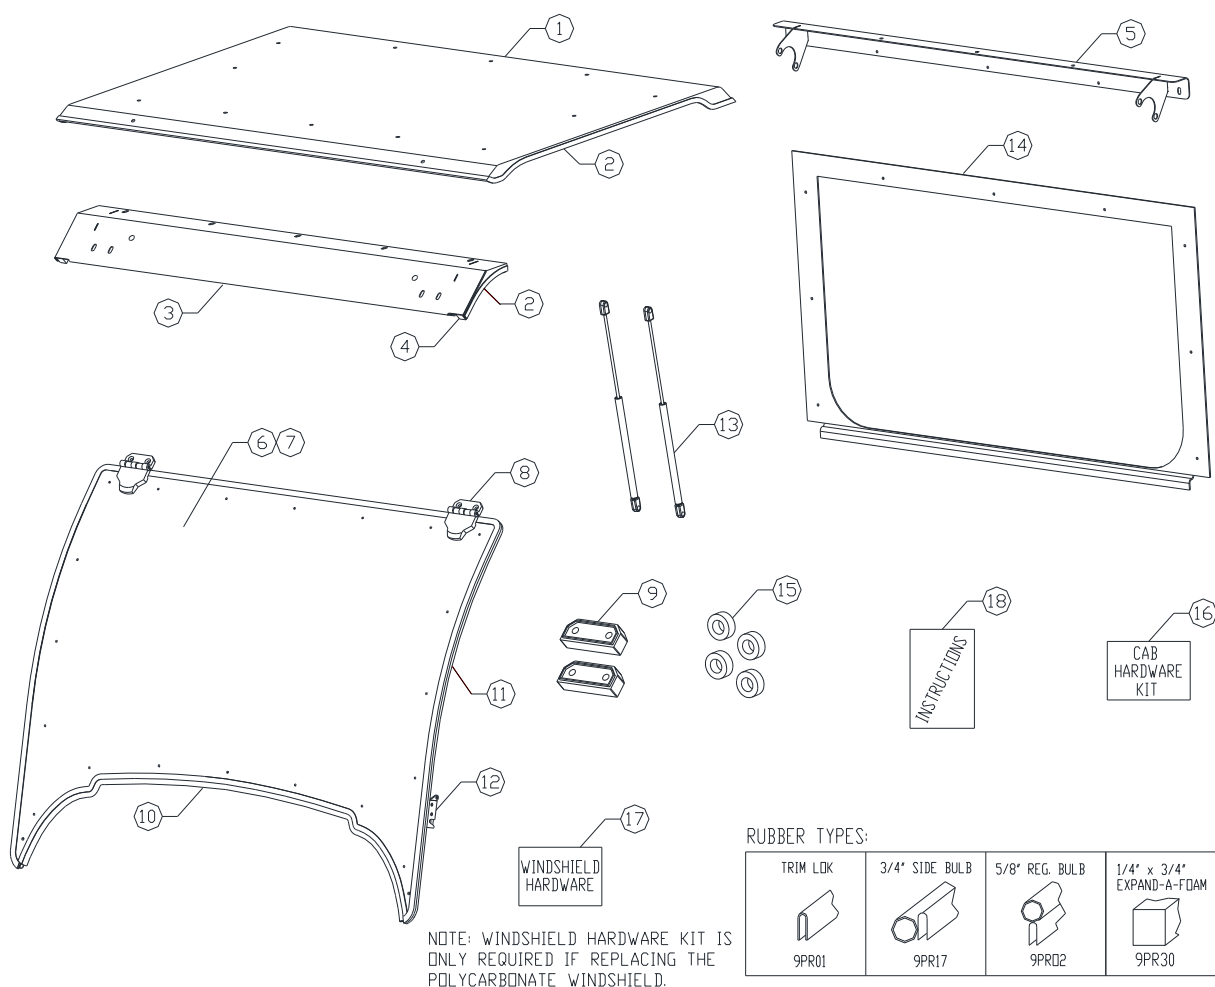

# ■ PARTS LIST

Ref. No.	Part No.	Part Name	QTY	REMARKS
1	77700-02501	DOOR - DRIVER'S SIDE (FULL ASSEMBLY)	1	Code No.: KB5SS-Q7L
2	77700-02502	DOOR - PASSENGER'S SIDE (FULL ASSEMBLY)	1	Code No.: KB5SS-Q7R
3	77700-02503	DOOR SKIN - DRIVER'S SIDE	1	Code No.: KB5SSDS-L
4	77700-02504	DOOR SKIN - PASSENGER'S SIDE	1	Code No.: KB5SSDS-R
5	70000-01018	OUTSIDE LOCKING DOOR HANDLE W/ KEYS	2	Code No.: 9DL01C (1 PC)
6	77700-02505	3/4" SIDE BULB W/ 1/4" GRIP	2	Code No.: 9PR38 (180")
7	70000-01017	INSIDE ROTARY DOOR LATCH, RIGHT	1	Code No.: 9DL01B (USED ON LEFT DOORS)
8	70000-01016	INSIDE ROTARY DOOR LATCH, LEFT	1	Code No.: 9DL01A (USED ON RIGHT DOORS)
9	77700-02506	DOOR STOP CABLE	2	Code No.: 9DS02 (SET OF 2)
10	77700-01032	LOW PROFILE HINGE SET	1	Code No.: 9HSLP (4 HINGES)
11	77700-12810	HINGE PLATE- DRIVER'S SIDE W/ HINGE SLEEVES	1	Code No.: 8SV-110-00109-L
12	77700-02508	HINGE PLATE- PASSENGER'S SIDE W/ HINGE SLEEVES	1	Code No.: KB5SS-10R
13	77700-02509	FRONT LEG - DRIVER'S SIDE W/ PINS,BALL STUD	1	Code No.: KB5SS-Q8L
14	77700-02510	FRONT LEG - PASSENGER'S SIDE W/ PINS,BALL STUD	1	Code No.: KB5SS-Q8R
15	77700-01033	STRIKER PIN	1	Code No.: 9DL01D-H (SET OF 8)
16	77700-01022	LATCH PIN	1	Code No.: 9YR001-01 (SET OF 5)
17	70000-01024	BALL STUD	2	Code No.: 9GS02A (1 PC.)
18	77700-01048	5/8" BULB RUBBER	1	Code No.: 9PR02 (180")
19	77700-02511	ROPS HIP RESTRAINT U-CLAMPS	1	Code No.: SM-KB5TMT (SET OF 2)
20	K7561-65412	DECAL: RELOCATION OF FACTORY ROPS DECAL	1	Code No.: K7561-65412
21	77700-12001	DECAL: RESTRICTION PLATE	1	Code No.: 9SV-9DL-272

