



**Polaris Ranger 400-EV PathPro SS Cab
(fits 2010 - current)
(p/n: 1PRG400FS)**

The contents of this envelope are the property of the owner.
Be sure to leave with the owner when installation is complete.

APPROXIMATE INSTALLATION TIME: 3 HOURS
(excluding accessories)




Shown with optional Windshield Wiper (p/n: 1POLRLCWPR)

- Additional options available (not shown):
- Interior Rear View Mirror (p/n: 9PM3)
 - Work lights (p/n: 9LW1)
 - Heater (p/n: 9PH20S42)
 - Strobe Light (p/n: 9LS1)



Polaris Ranger 400-EV PathPro SS Cab (2010-)

(1PRG400FS) Parts List

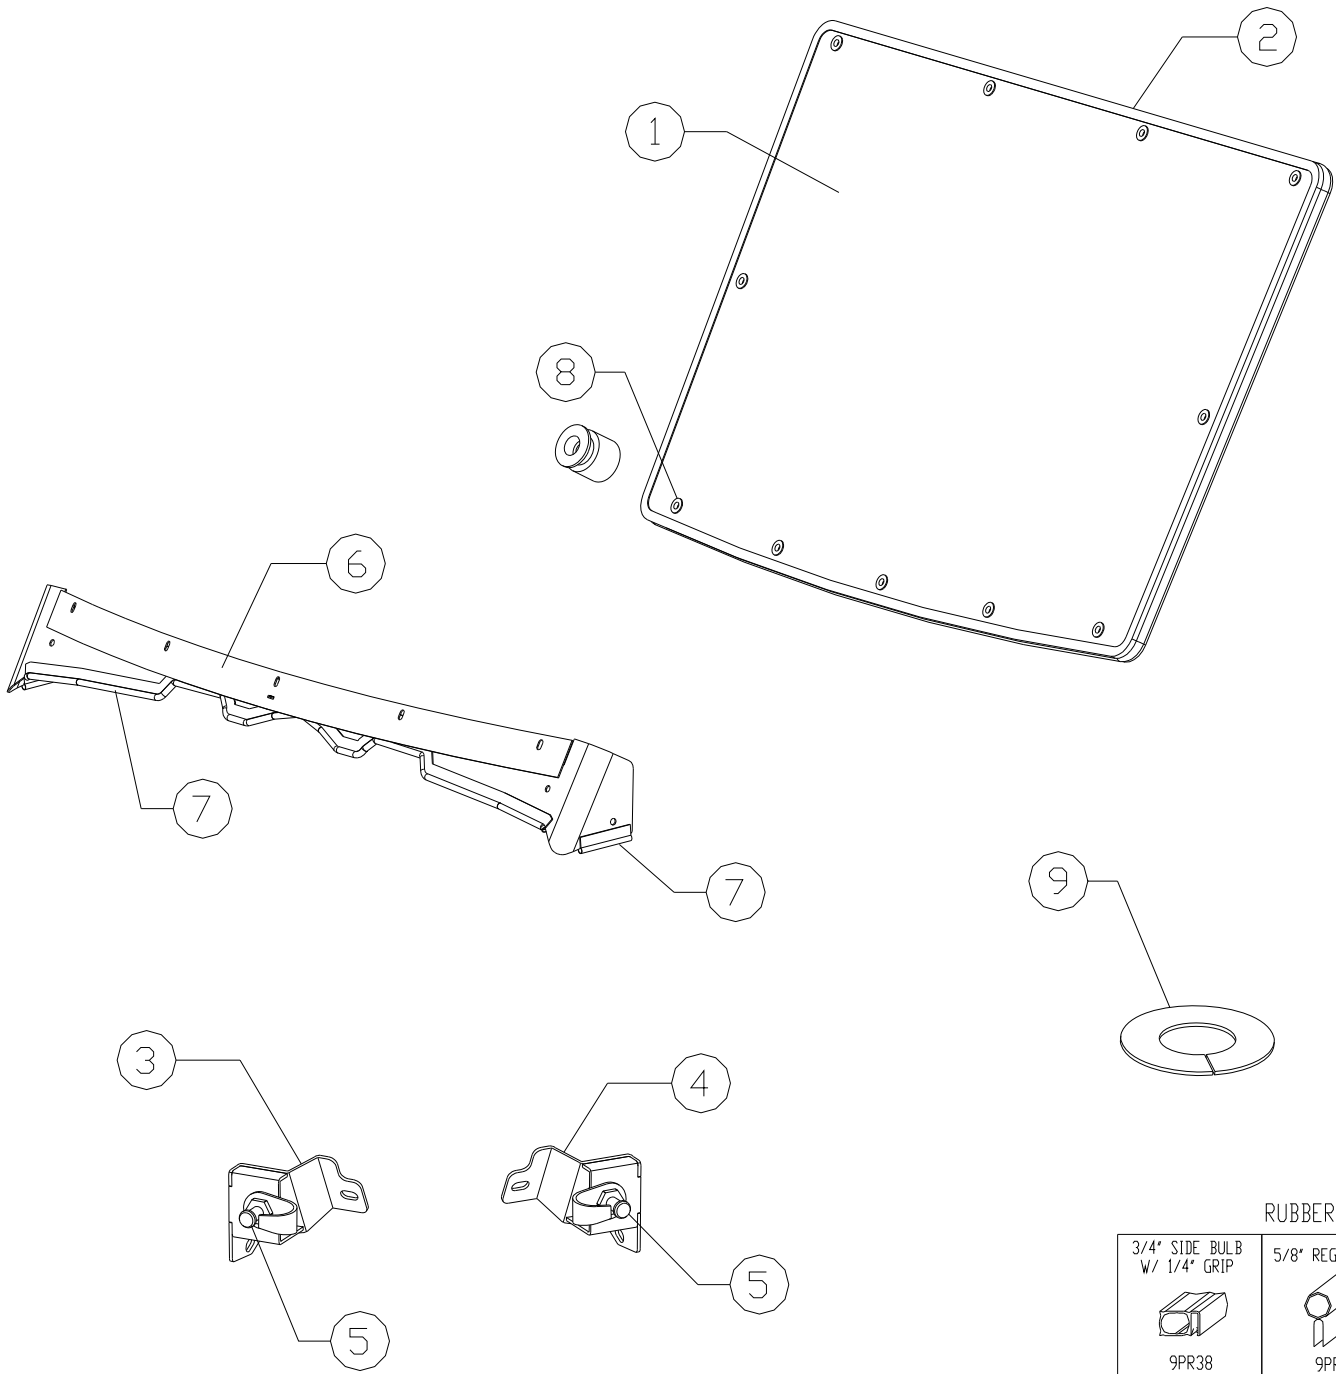REF. NO.	CODE NO.	QTY.	DESCRIPTION
1	8SV-P4FS02	1	WINDSHIELD (FULL ASSEMBLY)
2	9SV-PR38-15	1	3/4" SIDEBULB W/ 1/4" GRIP
3	8SV-P4FS04L-B4	1	FRONT MOUNT (DRIVER'S SIDE)
4	8SV-P4FS04R-B4	1	FRONT MOUNT (PASSENGER SIDE)
5	9SV-DSTR	1	STRIKER PIN
6	8SV-P4FS08-B4	1	WINDSHIELD COWL
7	9SV-PR02-15	1	5/8" BULB RUBBER
8	9SV-RG	1	RUBBER GROMMET (KIT OF 12)
9	8SV-P40010	1	FRONT SEAL (SET OF 2)




RUBBER TYPES:


<p>3/4" SIDE BULB W/ 1/4" GRIP</p>  <p>9PR38</p>	<p>5/8" REG. BULB</p>  <p>9PR02</p>
---	--

(1PRG400FS) Parts List

REF. NO.	CODE NO.	QTY.	DESCRIPTION
1	8SV-P4FS01-B4	1	ROOF (FULL ASSEMBLY)
2	9SV-PR01-20	1	TRIM LOK (1/8" GRIP)
3	8SV-P4FS10-B4	1	REAR ROOF SUPPORT
4	8SV-P4FS06-VS	1	REAR VINLY CURTAIN
5	8SV-P4FS03-B4	1	WINDSHIELD SUPPORT

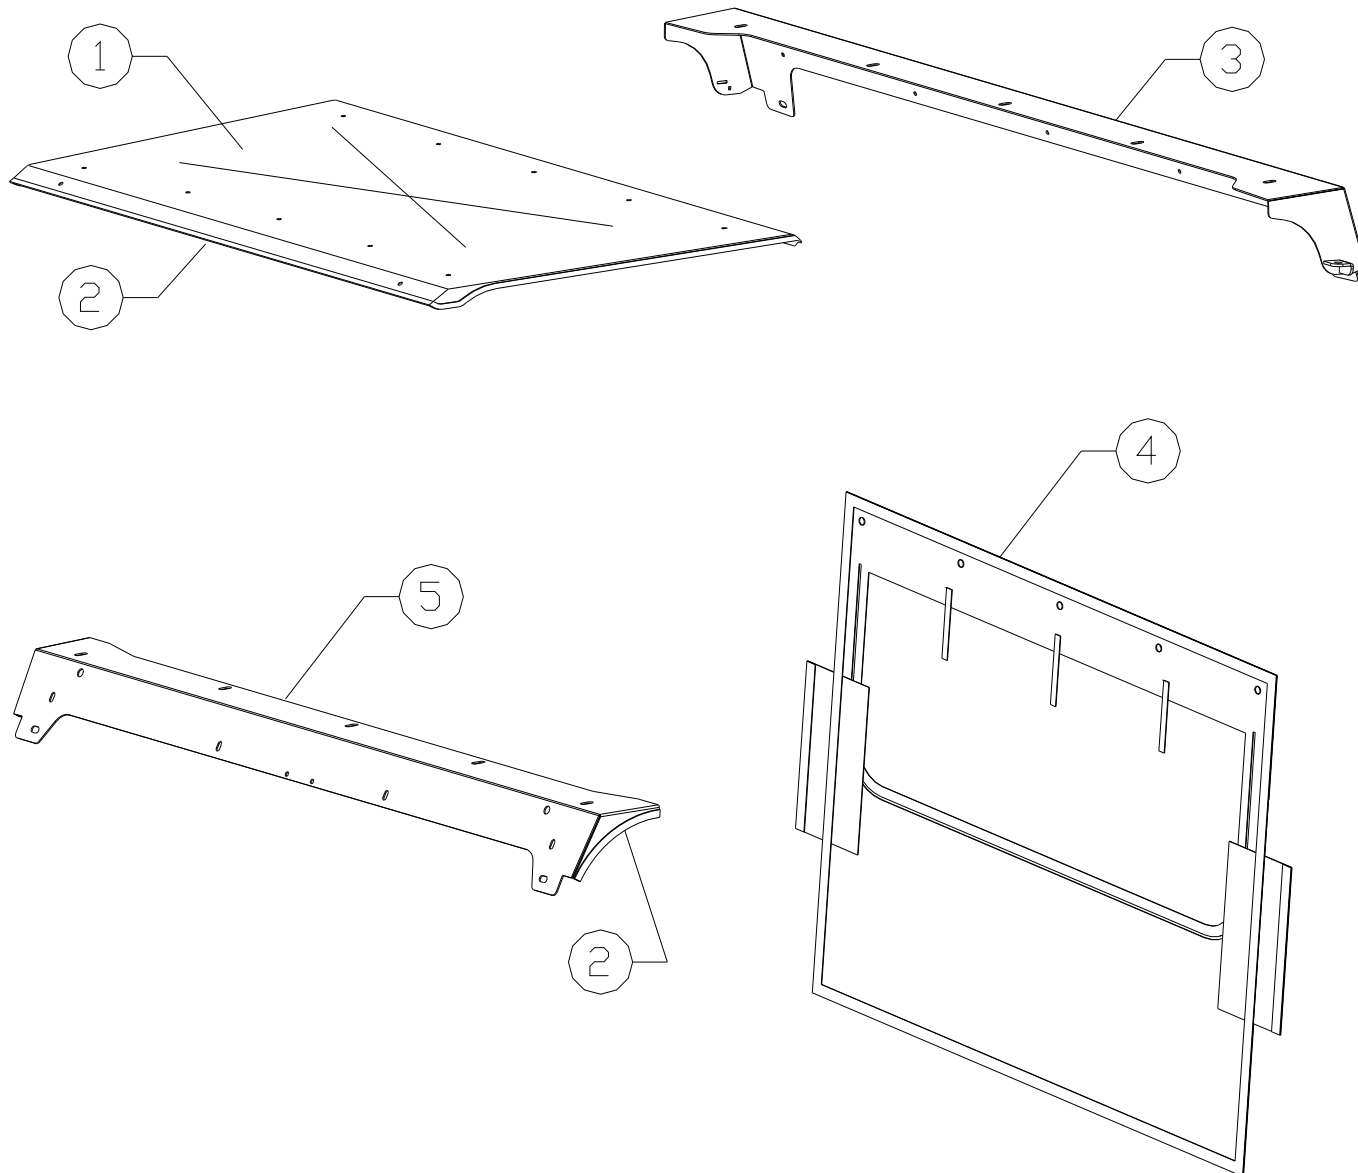


RUBBER TYPES:

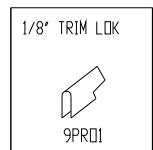

(1PRG400FS) Parts List

REF. NO.	CODE NO.	QTY.	DESCRIPTION
1	8SV-P4FS7L-VS	1	FULL DOOR ASSEMBLY (DRIVER'S SIDE)
2	8SV-P4FS7R-VS	1	FULL DOOR ASSEMBLY (PASSENGER SIDE)
3	9SV-IHRL	1	DOOR LATCH (BOTH SIDES)
4	9SV-OHRL	1	OUTSIDE LOCKING DOOR HANDLE (BOTH SIDES)
5	9SV-PR38-15	1	3/4" SIDE BULB W/ 1/4" GRIP
6	9SV-PR02-15	1	5/8" BULB RUBBER
7	8SV-RLC05L-B4	1	LOWER PIVOT MOUNT (DRIVER'S SIDE)
8	8SV-RLC05R-B4	1	LOWER PIVOT MOUNT (PASSENGER'S SIDE)
9	P400FS-HWK	1	HARDWARE KIT
10	9SV-DS02-2	1	DOOR STOP CABLE KIT (CONTAINS 2 CABLES & HARDWARE)
11	NA	1	CAB INSTALLATION INSTRUCTIONS

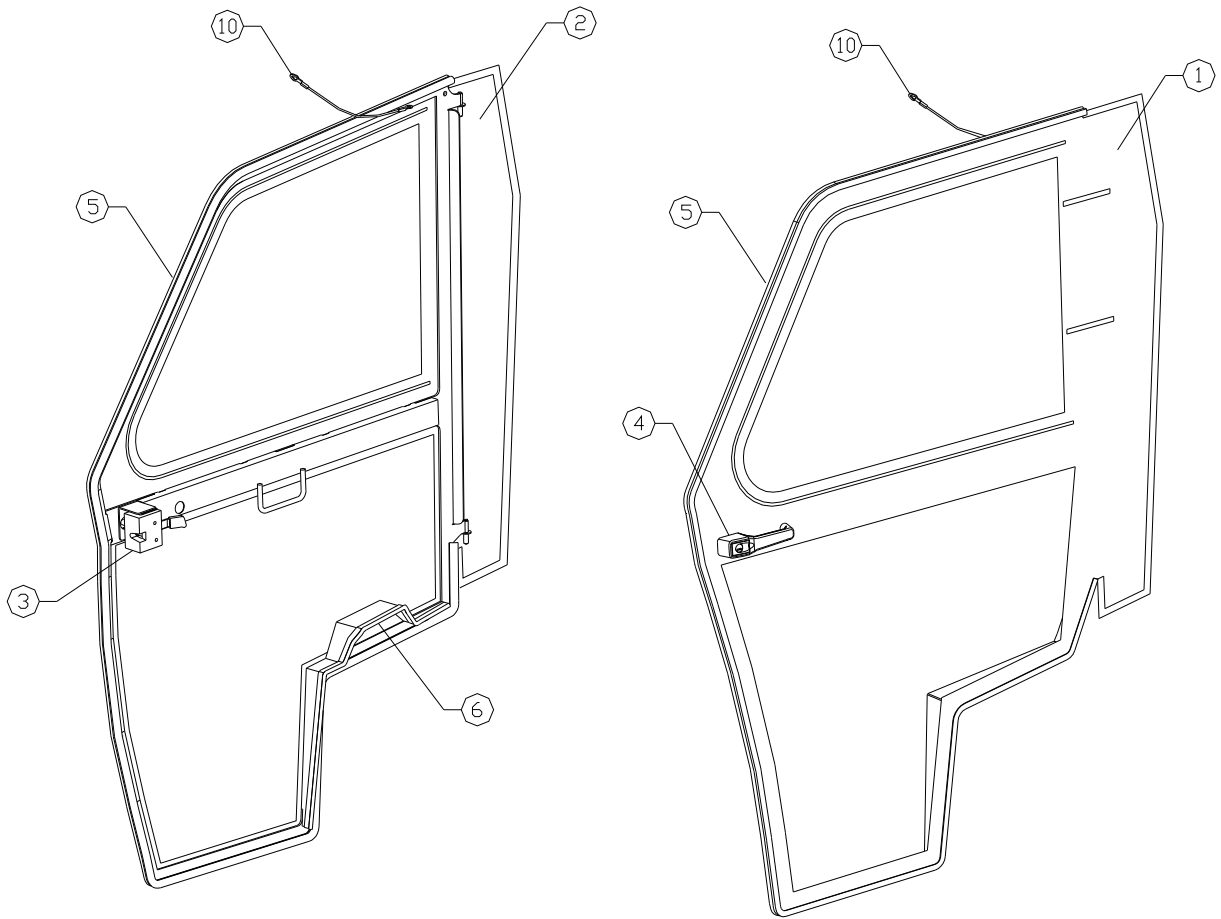

RUBBER TYPES:

