



## Kubota ZD1211 Cab Floor Panel Filler Kit p/n: 8SV-111-00059

# INSTALLATION MANUAL

### Installation

- 1.1 Lift up the floor pan door and place the 11-3/4" and 5-1/8" long pieces of bulb rubber on the bottom edge of the door avoiding the metal rod as shown in figure 1.1.
- 1.2 Place the two identical 10" long pieces of bulb rubber along the side edges of the opening as shown in figure 1.2.
- 1.3 Place the remaining three pieces of bulb rubber along the top edge of the floor pan door as shown in figure 1.3 (17" long, 1-7/8" long, and 1-7/8" long).
- 1.4 Prep: Make sure two areas are clean, dry, and at room temperature for best adhesion of the 6" strips shown in figure 1.3. Install the two thin 6" long adhesive rubber strips to the side edges along the surface that will be face down as shown in figure 1.3.
- 1.5 Lower the floor pan door and make sure it closes properly.

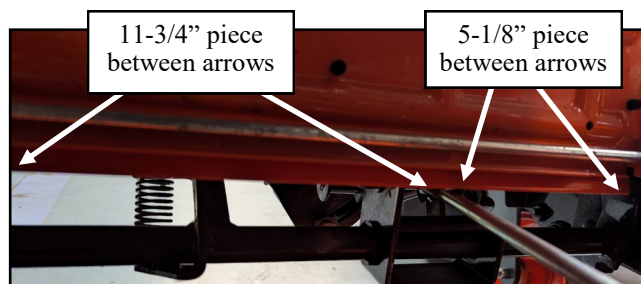


Fig. 1.1 (Bottom of floor pan door)

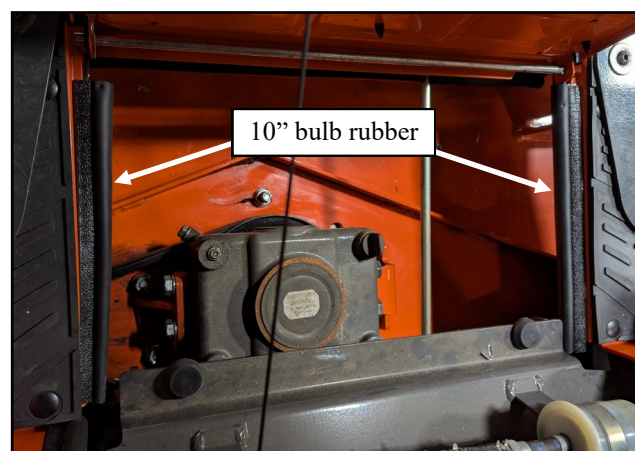


Fig. 1.2 (Floor pan opening with added seals)

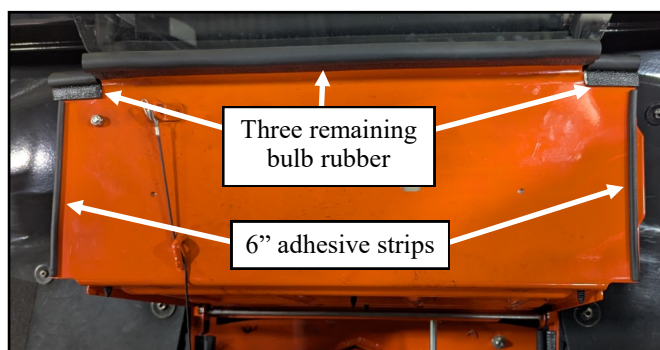


Fig. 1.3 (floor pan door with added seals)