



Kubota ZD1211 (p/n: 1KUBZD1211PR)

Cab with A/C
(fits both 60" and 72" mowers.
Does not fit with bagger system)

While this cab kit was designed to fit on the vehicle listed above, manufacturing tolerances and vehicle assembly may affect cab fitment. It is the responsibility of the cab installer to check all vehicle pedals and levers for full functionality and, as required, adjust the cab fitment to prevent any interference of the cab components with the travel of pedals or levers.



Premium Cab Shown with Options

Available Options:

1. Side View Mirrors (P/N: 9PM5)
2. Switch Panel (P/N: 1KUBZD1211CK) (req'd for following 2 items)
3. Front LED Work Lights (P/N: 1KUBZD1211LK)
4. Front Wiper/Washer Kit (P/N: 1KUBZD1211WK)

Approximate Installation Time *

Experienced Dealer Technician – 4 Hours

Average Dealer Technician – 6 Hours

Do-It-Yourself – 6-8 Hours

(* = Not including accessories)

Approximate Product Specifications

Floorboard to Roof Height: 60 inches

Weight: 240 lbs.

Cab Width: 54 inches

Register your new product quickly online at
Curtiscab.com/product-registration/



Curtis encourages all customers to register their Curtis products. However, failure to do so will not diminish right to warranty. Curtis Industries does not sell or share your information with anyone else.

Download a digital copy of your installation instructions online at Curtiscab.com/literature/



Curtis strives to continuously improve our products, technical documentation, etc. Therefore, the installation manual for this product may have been updated after your product was packaged. The latest revision of the installation manual can always be found at the website above.

The contents of this envelope are the property of the owner. Leave with the owner when installation is complete.

Rev. B, 6/17/2021

p/n: IM-1KUBZD1211PR

TABLE OF CONTENTS

WARNINGS, TIPS, & REQUIRED TOOLS..... 3

CAB INSTALLATION..... 4-21

CAB FEATURES & OPERATION..... 22

CARE AND MAINTENANCE..... 23

SERVICE PARTS 24-29

BOLT TORQUE SPECIFICATIONS 30

WARNINGS, TIPS, & REQUIRED TOOLS

Curtis cabs feature an assembly of parts designed for your vehicle which require adjustment and alignment of components to accommodate vehicle variations and provide proper weather protection. For accurate installation, proper operation, and years of satisfaction, please read and understand the installation and owner's manual fully prior to installing the cab.

From all of us at Curtis, we thank you for choosing our product.

NOTICE

Curtis Cabs, blades and general accessories add additional weight to the base vehicle. All Curtis accessory weights are listed in product brochures. Deduct the accessory's total weight from the vehicle's rated capacity and never exceed the vehicle's rated capacity including driver and passenger.

▲ WARNING *Exposure to Carbon Monoxide can Cause illness, serious injury or death. Never operate vehicle if suspicious of Carbon Monoxide. Inspect exhaust system for leaks monthly. Leaks can result from loose connections, corrosion, cracks or other damage to the exhaust manifold. If leaks are found, repair or replace exhaust system. Do not use vehicle until repair or replacement is complete.*

WARNING

S e r i o u s I n j u r y o r D e a t h	
	This cab enclosure does not provide protection from rollover or other accidents.
	This cab enclosure does not provide protection from flying objects including golf balls.
	This cab enclosure does not provide protection from lightning. When lightning threatens take cover and do not operate vehicle.

California Health and Safety Proposition 65 Warning: This product may contain chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

GENERAL INFORMATION BEFORE YOU START

HELPFUL HINTS:

- Refer to parts diagram found in the service parts section of this manual to help identify parts during the assembly process.
- To assist with the cab installation, leave all fasteners loose for later adjustment unless otherwise specified.
- Read and understand all instructions before beginning.
- Apply a silicone sealant to seal any minor gaps that may occur due to vehicle variations.
- Use caution to avoid damaging the factory installed threaded inserts or weld nuts. Begin the thread engagement by hand to avoid or correct potential cross threading.
- Make sure the areas where the supplied self-adhesive hook Velcro will be applied are clean and dry and at room temperature for best adhesion.

TOOLS REQUIRED:

- | | |
|---|---|
| <ul style="list-style-type: none"> •Set of Standard and Metric Sockets (3/8" + 1/2" Drive) •3/8" + 1/2" Drive Ratchets and Long Drive Extension •Set of Standard and Metric Open-End Wrenches •Set of Standard and Metric Allen Wrenches •#1, #2, and #3 Phillips Head Screwdrivers •Torque Wrench (1/2" Drive) •Rubber Mallet or Plastic Dead Blow Hammer •Bungee Cord or Twine •Hoisting Strap | <ul style="list-style-type: none"> •Drill/Driver •9/32" Drill Bit •#2 and #3 Phillips Head Bit •Utility Knife •Pair of Scissors •Shears •Grease •Black Silicone Sealant •Steel Straight Edge |
|---|---|

CAB INSTALLATION

Step 1: (Vehicle Prep)

- 1.1 Park vehicle in a location accessible by an overhead hoist.
- 1.2 Disconnect the negative battery terminal.
- 1.3 Remove the bolt from the battery clamp and replace with a longer one from the supplied hardware kit and re-use the nut, but do not re-connect the battery.

<u>Hardware Used</u>	<u>Qty</u>
5/16x1-1/4 Square Head Bolt	1

- 1.4 Remove the plastic cover around both the left and right control sticks. (Note: the nut on the lower screw can be loosened slightly and the panel can then be removed. It does not need to be fully removed from the screw.)

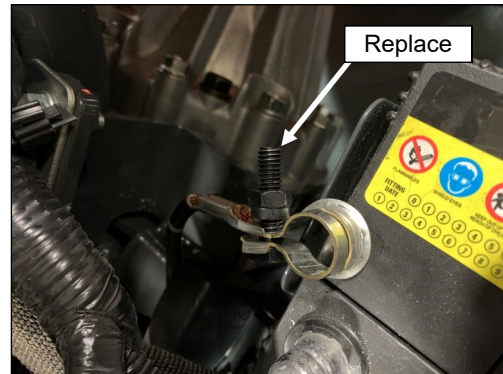


Fig. 1.3 (Replace Negative Battery Bolt)

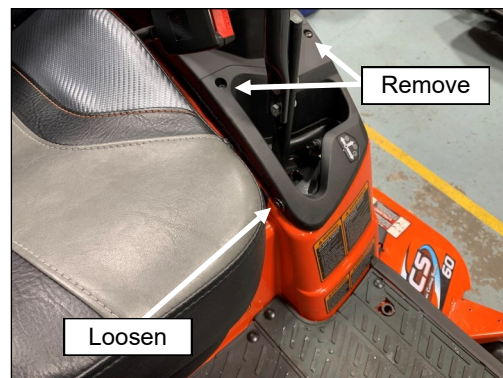


Fig. 1.4 (Remove Covers)

- 1.5 Install the supplied bulb rubber to the bottom flange of the covers. The rubber should be joined where shown.
- 1.6 Re-install only the left plastic cover ensuring that the bulb on the rubber is not causing interference with the controls or switch. The right cover will be re-installed in a later step.



Fig. 1.5 (Install Rubber (Left shown))

Step 2: (Dynamo Installation)

- 2.1 Remove and save the OEM dynamo. Retain the upper bolt and discard the lower bolt.
- 2.2 Remove and discard the engine lifting ring.
- 2.3 Remove and discard the two fasteners at the front of the muffler

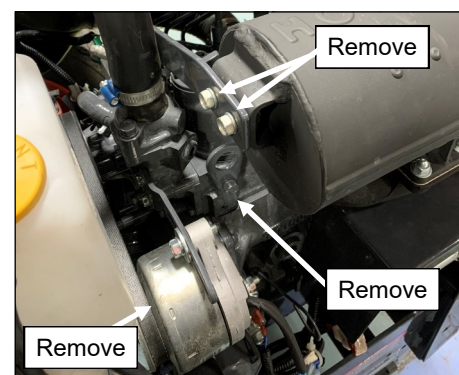


Fig. 2.1 (Remove Components)

CAB INSTALLATION

- 2.4 Disconnect the wires from the stud on the starter as well as the wire plugged into the connector on the starter.
- 2.5 Remove and discard three bolts from the side of the engine as shown.

Note: It is critical that the following steps are completed in order and followed closely. Failure to do so may result in vehicle or component damage.

- 2.6 Pre-assemble the upper dynamo bracket and muffler bracket as shown. Lightly tighten the bolts and then back off to allow the brackets to slide with slight resistance when moved by hand. The brackets should maintain surface to surface contact.

<u>Hardware Used</u>	<u>Qty</u>
M8x1.25x25mm Hex Head Bolt	2
M8x16mm Steel Flat Washer	2
M8x1.25 Nylock Flange Nut	2

- 2.7 Install the upper dynamo bracket to the lifting ring location as shown. Tighten bolt and then back off just enough so that the bracket can still move with slight resistance when moved by hand.

<u>Hardware Used</u>	<u>Qty</u>
M8x1.25x16mm Hex Head Bolt	1
M8x16mm Steel Flat Washer	1

- 2.8 Attach the muffler bracket to the muffler. Tighten bolts and then back off to allow the bracket to slide with slight resistance when moved by hand. The brackets should maintain surface to surface contact.

<u>Hardware Used</u>	<u>Qty</u>
M8x1.25x25mm Hex Head Bolt	2
M8x14 Split Lock Washer	2
M8x16 Steel Flat Washer	2

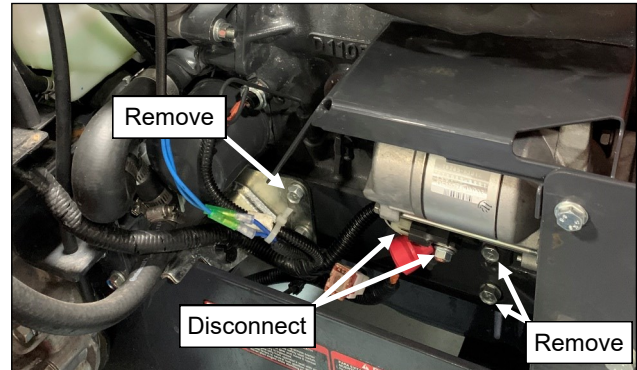


Fig. 2.4 (Remove Components)



Fig. 2.6 (Pre-Assemble Brackets)

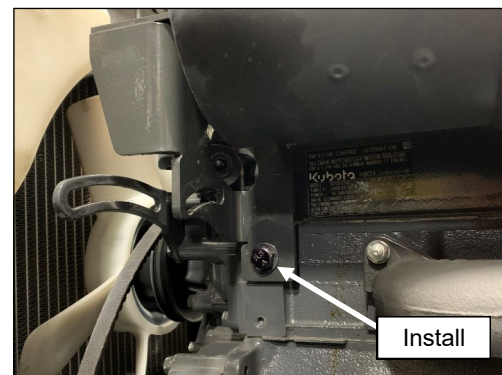


Fig. 2.7 (Install Upper Dynamo Bracket)

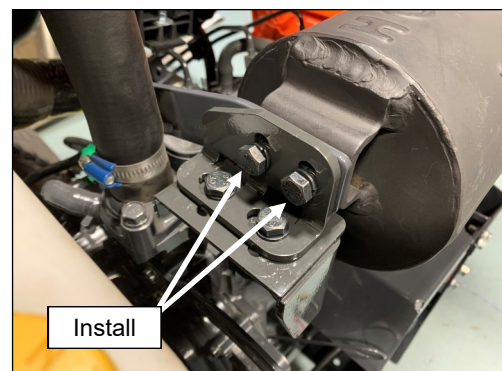


Fig. 2.8 (Attach to Muffler)

CAB INSTALLATION

2.9 Remove and discard the nut and washers from the OEM dynamo shaft.

2.10 Remove and discard the shaft from the OEM dynamo, but keep the dynamo together when removing to ensure spacer stays in its proper location. If the rotor is separated from the stator and the spacer comes loose, ensure that the flat side of the spacer is outwards towards the pulley and the smooth side is inwards against the bearing.

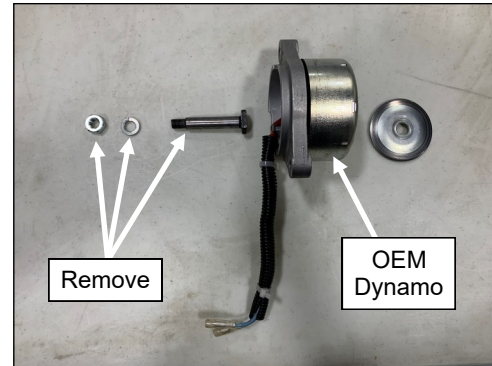


Fig. 2.9 (Remove OEM Dynamo Shaft)

2.11 Install the OEM dynamo onto the shaft of the secondary dynamo provided in the kit. A rubber or plastic mallet may be required to tap the shaft through the bearings. Secure with the following hardware and torque to 39.2 to 44.1 Nm (28.9 to 32.5 lbf-ft). Ensure that the flat washer is centered over the shaft when tightening.

<u>Hardware Used</u>	<u>Qty</u>
M12x24 Steel Flat Washer	1
M10x18 Split Lock Washer	1
M10x1.25 Nut	1

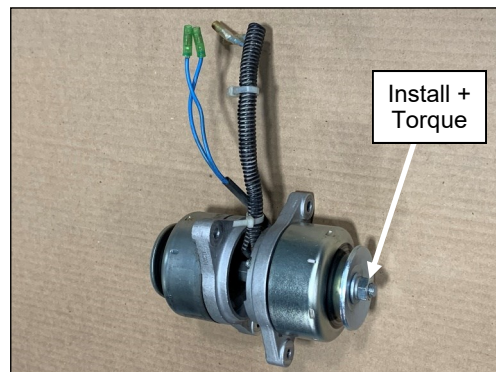


Fig. 2.11 (Install OEM Dynamo onto Shaft)

2.12 Install the following hardware through the threaded ear in the secondary dynamo to act as a stud and tighten.

<u>Hardware Used</u>	<u>Qty</u>
M8x1.25x35mm Hex Head Bolt	1

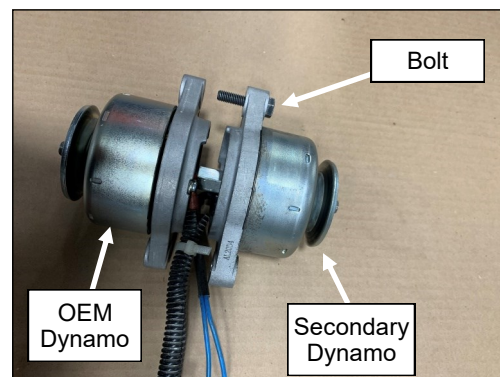


Fig. 2.12 (Install Dynamo Assembly)

2.13 Install the double dynamo setup onto the vehicle with the OEM dynamo back into its original location and loosely secure using the original OEM upper bolt. Ensure that the bolt from the previous step is in the slot in the upper dynamo bracket. Install a nut onto the end of the bolt and tighten just enough that the dynamo can move in the slot with surface to surface contact.

<u>Hardware Used</u>	<u>Qty</u>
OEM Dynamo Upper Bolt	1
M8x1.25 Flange Locknut	1

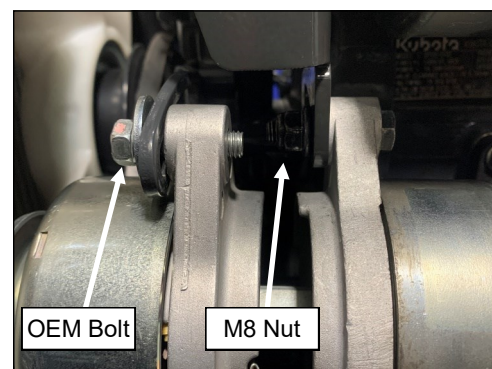


Fig. 2.13 (Install Dynamo Assembly)

CAB INSTALLATION

- 2.14 Pre-assemble the lower pivot mounts together as shown. Lightly tighten the bolts and then back off just enough so that the parts can be moved by hand, but still have surface to surface contact.

<u>Hardware Used</u>	<u>Qty</u>
1/4-20x5/8 Flange Bolt	2
M8x1.25x25mm Hex Head Bolt	2
M8x14 Split Lock Washer	2
M8x16 Steel Flat Washer	2

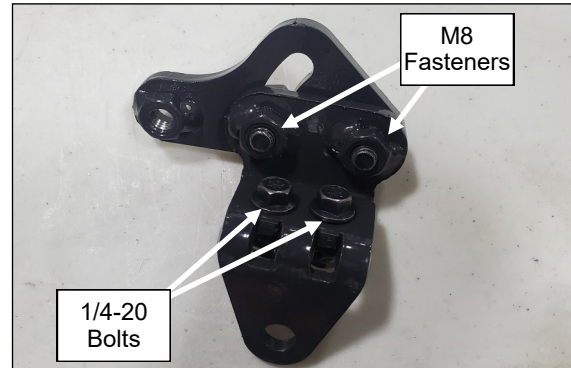


Fig. 2.14 (Install Lower Pivot Bolt, OEM Dynamo)

- 2.15 Install the following hardware for the lower OEM dynamo pivot bolt, but install the pre-assembled pivot mounts under the head of the bolt as shown. Lightly tighten the bolt and then back off slightly so that the dynamo can pivot by hand.

<u>Hardware Used</u>	<u>Qty</u>
M8x1.25x65mm Hex Head Bolt	1
M8x1.25 Flange Locknut	1

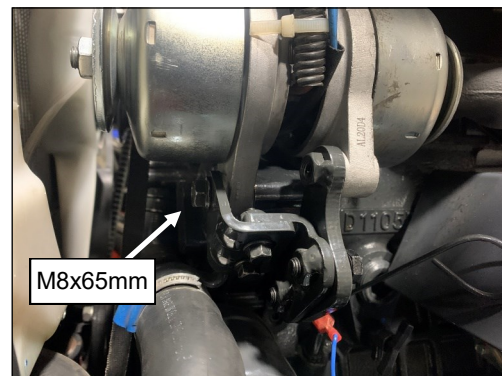


Fig. 2.15 (Install Lower Pivot Bolt, OEM Dynamo)

- 2.16 Secure the lower ear on the secondary dynamo to the pivot mount and tighten so that the dynamo can still move freely.

<u>Hardware Used</u>	<u>Qty</u>
M8x1.25x35mm Hex Head Bolt	1

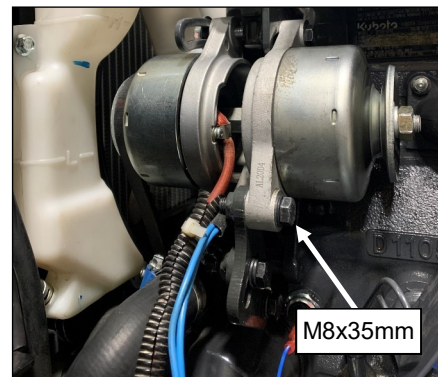


Fig. 2.16 (Install Lower Pivot Bolt, 2nd Dynamo)

Note: follow steps 2.17 and 2.18 (1-7) exactly as specified.

- 2.17 Re-install the OEM belt onto the OEM dynamo and tension. Tighten the upper OEM dynamo bolt first then the lower. The bolts for the secondary dynamo will be tightened in the following step.

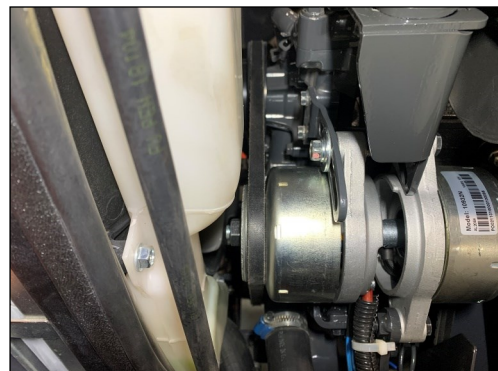


Fig. 2.17 (Re-install OEM Belt)

CAB INSTALLATION

2.18 Tighten the secondary dynamo in the following sequence. **Failure to follow the sequence may result in vehicle or component damage.**

1. Tighten bolt in the original engine lifting ring location
2. Tighten the two bolts going into the muffler
3. Tighten the two bolts holding the upper dynamo bracket to the muffler bracket
4. Tighten the nut on the upper dynamo ear
5. Tighten the lower bolt on the dynamo
6. Tighten the two M8 Bolts on the lower pivot mount
7. Tighten the two 1/4-20 bolts on the lower pivot mount

Step 3: (Install ROPS Mounts)

- 3.1 Remove the left and right hand tension screws and clips on the ROPS and discard.
- 3.2 Remove the ROPS pin and bolt from the left side and discard. Leave the right side installed at this time.

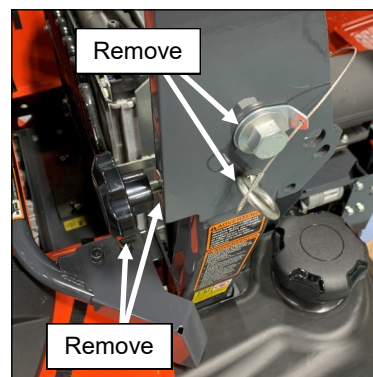


Fig. 3.1 (Remove hand screws and ROPS Bolt)

- 3.3 Remove the upper bolt on the cross hose protector as shown and discard.



Fig. 3.3 (Remove upper bolt)

- 3.4 Install the left ROPS mount using the following hardware. The large bolt in the pivot hole should be tightened just enough so that the ROPS can still tilt without damaging the paint. The large bolt in the hole where the pin was removed should be installed through the bracket, but no nut installed at this time. Tighten the smaller M8 bolt at this time.

<u>Hardware Used</u>	<u>Qty</u>
M16x2x80mm Hex Head Bolt	2
M16x30 Steel Flat Washer	3
M16x2 Locknut	1
M8x1.25x30mm Flange Bolt	1

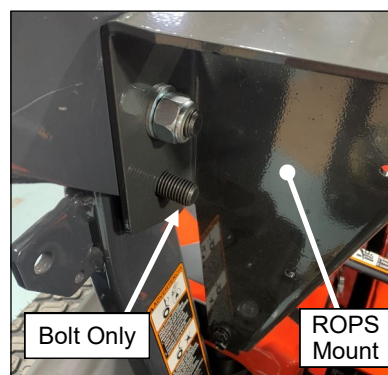


Fig. 3.4 (Install Left ROPS Mount)

CAB INSTALLATION

- 3.5 Repeat steps 3.2, 3.3, and 3.4 for the right side.
- 3.6 Remove the lower M16 bolts from the previous steps and tilt the ROPS back and re-use the bolts to pin in the tilted position. Be careful not to damage the engine hood if it is in the open position. The nuts on the lower bolts will be installed in a later step.



Fig. 3.6 (Tilt the ROPS)

Step 4: (Vehicle Prep)

- 4.1 Remove and discard the four floorboard bolts shown in Figure 4.1. If the mower is a 60", remove two additional bolts in the location shown.

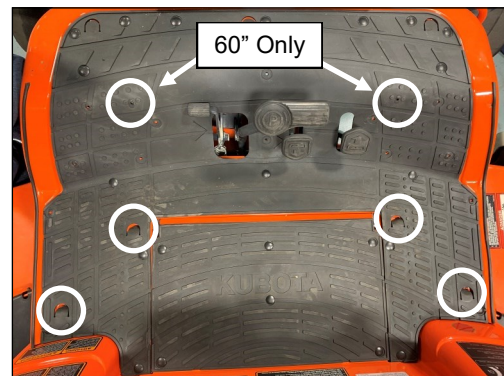


Fig. 4.1 (Remove Bolts)

- 4.2 Cut the rubber tabs on the floormat at the bolt locations as shown so that the hole is clearly accessible.

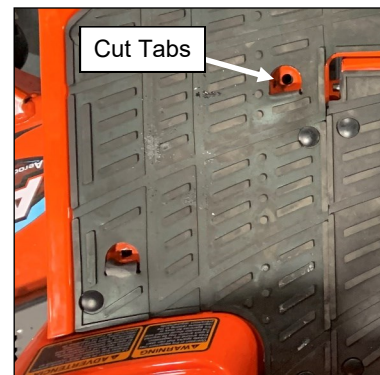


Fig. 4.2 (Cut Floormat)

- 4.3 Remove the pine tree clips from the floormat at the 12 locations shown.



Fig. 4.3 (Remove Pine Tree Clips)

CAB INSTALLATION

- 4.4 If installing on a 60" mower, remove and save the tilting front cover at the front of the machine.
- 4.5 Install the pedal seal panel on top of the floormat as shown. Secure to the floorpan using the following hardware. The floorpan may need to be lifted slightly in the front on a 60" mower to access the center screw.

Hardware Used

#10-32x3/4" Phillips Head Screw

#10-32 Flange Nut

Qty

6

6



Fig. 4.5 (Install Sealing Brushes)

- 4.6 Install self-adhesive seal around the edge of the floorpan as shown and cut to length. Refer to Figure 4.6a for 60" and 4.6b for 72".

Note: placement on the 72" machine. Seal should follow along the white line shown.



Fig. 4.6a (Seal location on 60")



Fig. 4.6b (Seal location on 72")

- 4.7 Insert spacer bushings into the depressions where the floorboard bolts were removed. (72" uses 4 bushings, 60" uses 6 bushings/spacers)

Hardware Used

1/2" Long Spacer

Qty

4 or 6

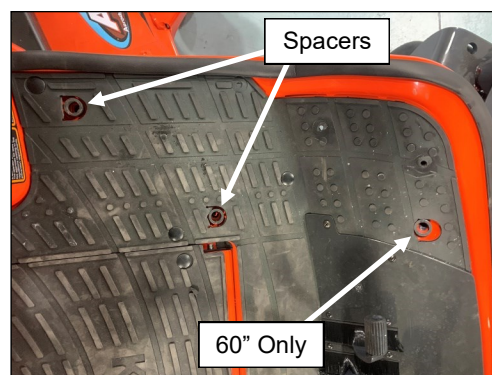


Fig. 4.7 (Install Spacers)

CAB INSTALLATION

- 4.8 Remove and discard the two screws securing the voltage regulator to the frame.
- 4.9 Install the supplied secondary voltage regulator in front of the OEM regulator with the following hardware.

Hardware Used	Qty
M6x1.0x70mm Hex Head Bolt	2
M6x12 Steel Flat Washer	2
1.25" Long Aluminum Spacer	2



Fig. 4.9 (Install Secondary Regulator)

- 4.10 Flip the seat forward and install the supplied adhesive Velcro as shown. Be sure to wipe down the surfaces where the Velcro will be adhered and that the surfaces are at room temperature.

Apply between round seat bumpers
 Apply along horizontal edge of fender
 Apply 3 sections underneath front seat support frame member as indicated by dotted line. Velcro must be on the underside.

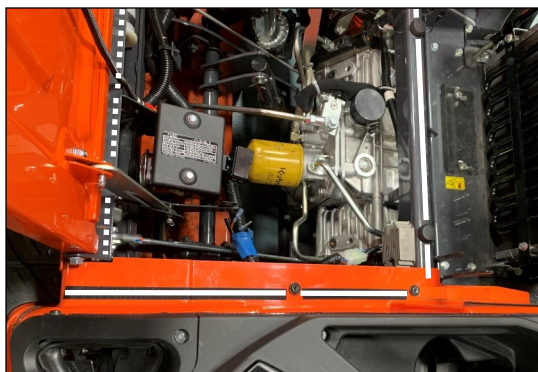


Fig. 4.10 (Install Velcro)

Step 5: (Cabin Installation)

- 5.1 Lower the seat and slide the seat all the way forward and use the knob on the seat to tilt the seatback forward as much as possible.
- 5.2 Remove the doors from the cabin and set aside carefully to prevent scratching the panels.



Fig. 5.1 (Move Seat forward, Rotate seatback)

- 5.3 Remove the 3 bolts securing the compressor bracket to the base of the shipping mount and cut any zip ties holding the hoses and wire harness to the shipping mount. Support the compressor using a bungee cord or rope. Do not ever use the hoses to support the compressor or damage may occur.



Fig. 5.3 (Unbolt Compressor)

CAB INSTALLATION

- 5.4 Position a lifting strap where shown so that it sits roughly 2" in front of the b-pillar.



Fig. 5.4 (Position lifting strap)

- 5.5 Put tension on the lifting strap with the overhead hoist. Remove and discard the 4 bolts holding the rear of the cab down to the shipping bracket (located inside the cab) as well as the 4 lag screws holding the floorboards to the pallet.
- 5.6 With assistance, lift the cabin and position over the vehicle. Be sure to support the A/C compressor so that it never hangs from the hoses.
- 5.7 Lower the cabin slowly onto the vehicle being careful to not scratch the fenders with the rear edge of the floorboard. The A/C compressor should pass to the inside of the ROPS and end up on the left side of the engine.

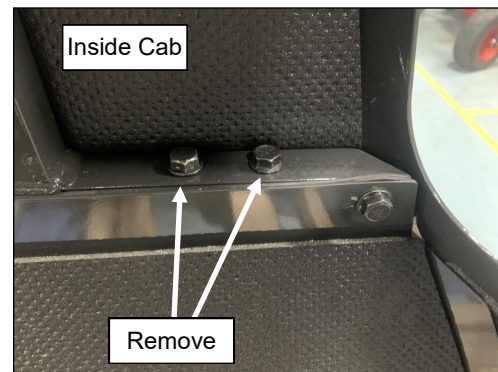


Fig. 5.5a (Remove Rear Bolts)



Fig. 5.5b (Remove Lag Screws)

- 5.8 Fasten the rear of the cabin to the ROPS mounts using the following hardware. Leave loose at this time.

Hardware Used	Qty
5/16-18 x 1-3/4 Hex Head Bolt	4
5/16-18 Flange Nut	4

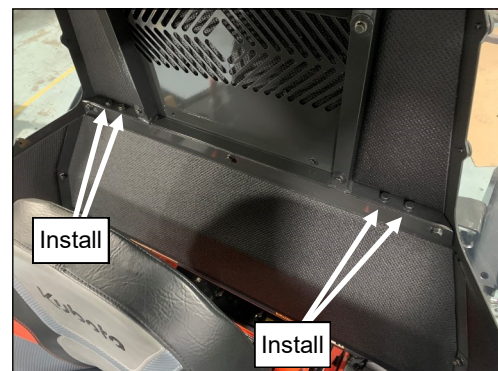


Fig. 5.8 (Install Rear Bolts)

CAB INSTALLATION

- 5.9 Fasten the cab to the floor of the tractor using the following hardware. Note: On 60" tractors, use 6 M8 bolts. On 72" tractors, only install 4 M8 bolts and leave additional slot open.

<u>Hardware Used</u>	<u>Qty</u>
M8x1.25x40mm Button Head Bolt	4 or 6
5/16x1-1/4" Steel Fender Washers	4 or 6
1/4-20x1" Button Head Bolt	6
1/4x1" Steel Fender Washers	6
1/4-20 Flange Nut	6

- 5.10 Tighten all floorboard bolts and rear cabin bolts at this time

- 5.11 Raise ROPS bar and loosely re-install M16 bolts used to pin it.

- 5.12 Loosen the 4 factory installed 5/16" bolts securing the upper ROPS mount so that the mount can slide up against the underside of the ROPS.

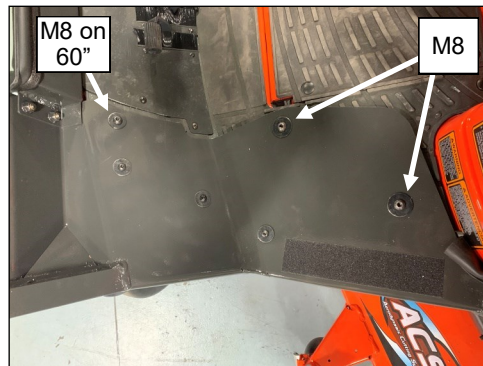


Fig. 5.9 (Install Floorboard Bolts)

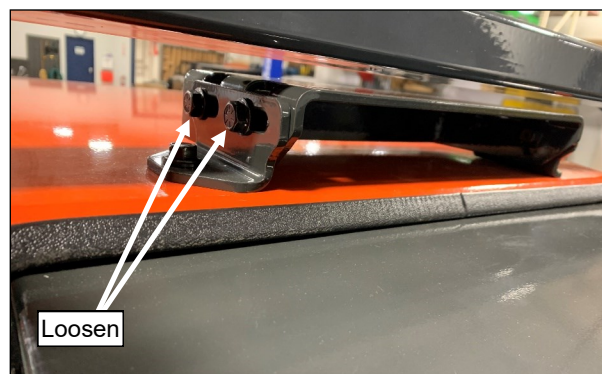


Fig. 5.12 (Loosen Upper ROPS Mount)

- 5.13 Install the upper ROPS clamp plate to the top side of the ROPS and secure with the following hardware. Bolts can be tightened at this time. Hand tighten only. Do not over-tighten or plate will deform.

<u>Hardware Used</u>	<u>Qty</u>
5/16-18x2-1/2" Flange Bolts	4
5/16x1" Steel Fender Washers	8
5/16-18 Flange Nut	4

- 5.14 Re-tighten the bolts loosened in step 5.12.

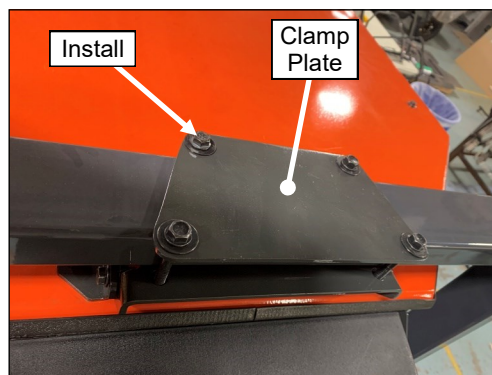


Fig. 5.13 (Install Upper ROPS Clamp Plate)

- 5.15 Install the washer and nuts onto the M16 ROPS bolts and tighten at this time. Note: The tightening torque is different for the upper and lower bolt.

Torque the upper bolt to 167 to 196 Nm (123 to 144 lbf-ft)

Torque the lower bolt to 78 to 90 Nm (58 to 66 lbf-ft)

<u>Hardware Used</u>	<u>Qty</u>
M16x30 Steel Flat Washer	1
M16x2 Locknut	1

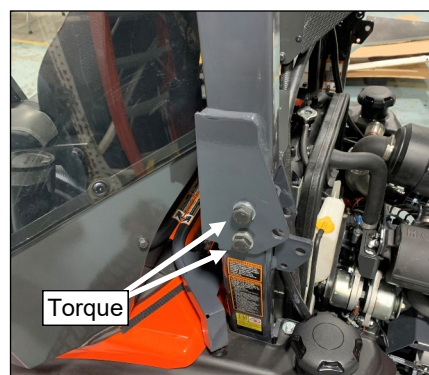


Fig. 5.15 (Tighten ROPS Bolts)

CAB INSTALLATION

- 5.16 If installed on a 72" mower, drill 9/32" holes through the tractor floorboard centered on the open slots in the cab floorboards. Do not drill too deep to avoid damaging any items on the underside of the floorboard.
- 5.17 Dab the raw edge of the holes in the steel floorboard with some paint to prevent corrosion.
- 5.18 Install the following hardware into the newly drilled holes and tighten.

<u>Hardware Used</u>	<u>Qty</u>
1/4-20x1" Button Head Bolt	2
1/4x1" Steel Fender Washers	2
1/4-20 Flange Nut	2

Step 6: (Compressor Installation)

- 6.1 Loosen the lower and upper pivot bolts that are securing the compressor to its mounts.
- 6.2 Move compressor into location on the left side of the engine and secure the bracket with the hardware listed below as shown in figures 6.2a and 6.2b.

<u>Hardware Used</u>	<u>Qty</u>
M10x1.25x30mm Flange Bolt	3

- 6.3 Align the pulley on the compressor with the pulley on the dynamo using a steel straight edge and tighten the three mounting bolts installed in step 6.2.

- 6.4 With the compressor tilted all the way out in its adjustment slot, re-connect the two ring terminals to the stud on the starter and re-install the additional wire into the connector on the starter. Torque the stud to 5.9 to 11.8 Nm (4.3 to 8.7 lbf-ft)

Note: Be sure that none of the wires or terminals are touching the steel compressor bracket after tightening the starter nut! Ensure protective boot is re-installed.

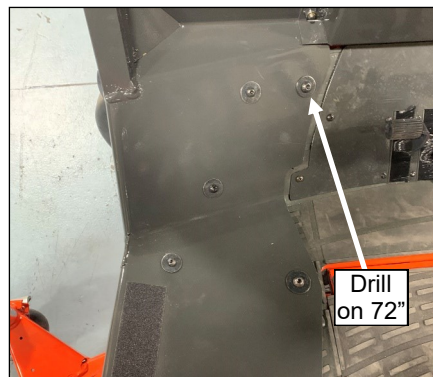


Fig. 5.16 (Drill Hole on 72" Mowers)

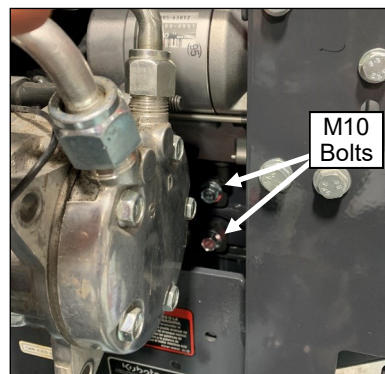


Fig. 6.2a (Secure Compressor with 2 Bolts in Rear)

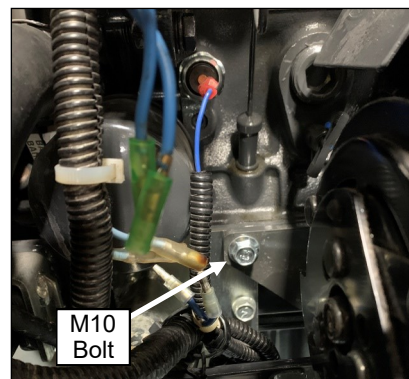


Fig. 6.2b (Secure Compressor with 1 Bolt in Front)

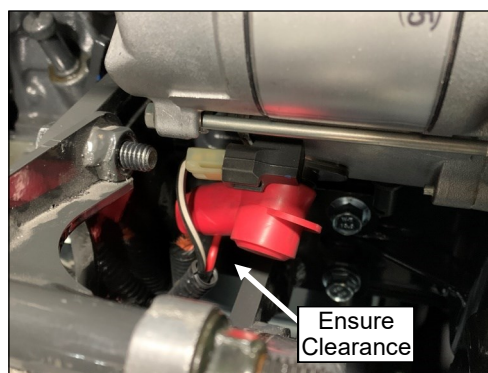


Fig. 6.4 (Re-Attach Starter Wires)

CAB INSTALLATION

- 6.5 Install the supplied belt and tension. Tighten all compressor pivot bolts at this time.



Fig. 6.5 (Install Belt and Tension)

- 6.6 Install two p-clamps to the lower ROPS brackets as shown to secure the larger A/C hose to the ROPS bracket. Twist clamps and adjust hose position so that hose does not contact sharp edges of ROPS bracket.

<u>Hardware Used</u>	<u>Qty</u>
1/4-20x1" Button Head Bolt	2
1/4-20 Flange Nut	2
3/4" P-Clamp	2

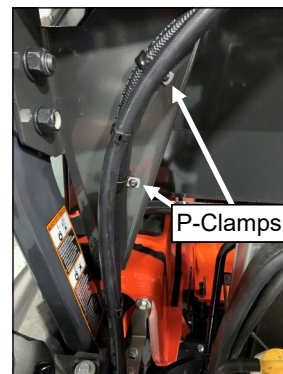


Fig. 6.6 (P-Clamp Hoses to ROPS Bracket)

- 6.7 Secure both hoses to the vehicle frame using a cable tie as shown. Ensure that the hoses will not contact any sharp edges.

<u>Hardware Used</u>	<u>Qty</u>
Cable Tie	1

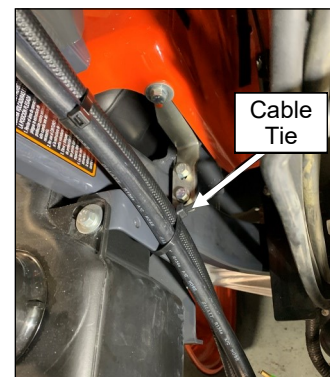


Fig. 6.7 (Cable Tie Hoses)

Step 7: (Wiring)

- 7.1 Cut the cable ties securing the wiring harness and attach the harness to the lower ROPS brackets with p-clamps as shown.

<u>Hardware Used</u>	<u>Qty</u>
1/4-20x1" Button Head Bolt	2
1/4-20 Flange Nut	2
3/4" P-Clamp	2

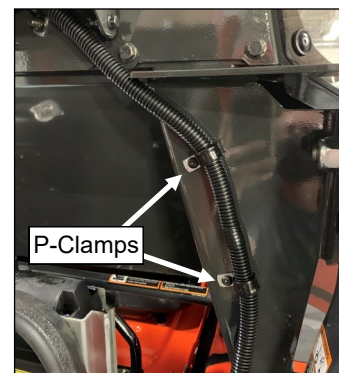


Fig. 7.1 (P-Clamp Wire Harness to ROPS Bracket)

CAB INSTALLATION

- 7.2 Secure the wire harness to the vehicle frame using a cable tie as shown. Ensure that the harness will not contact any sharp edges.

Hardware Used

Cable Tie

Qty

1

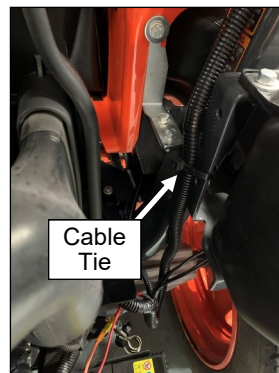


Fig. 7.2 (Secure Wire Harness to Vehicle)

- 7.3 Install the ring terminals on the red wires onto the stud on the positive battery clamp (outboard of the existing battery clamp nut) and secure with the following hardware.

Hardware Used

M6x1.0 Nut

Qty

1

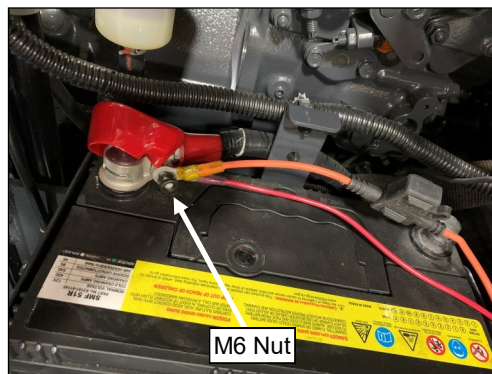


Fig. 7.3 (Attach Red Wires to Battery)

- 7.4 Locate the portion of the wire harness with two ring terminals crimped on the ends of black and gray wires. Route the ring terminals forward over the ROPS tube in front of the battery next to the existing wiring and up along the right side of the vehicle to right hand control.

Note: Wires must be routed above the ROPS, but below the flat area that the hood seals on when it is closed.

Avoid any moving parts.



Fig. 7.4 (Route Harness to Right Control Stick)

- 7.5 Route the wires up behind the right control stick and connect to the supplied switch as shown. The gray wire should go to the center screw (NO, #3) and the black wire should be connected to the COM, #1 screw.

It is recommended to do the assembly over the floor of the tractor to prevent losing any screws.



Fig. 7.5 (Connect Wires to Switch)

CAB INSTALLATION

- 7.6 Remove the bolt shown in figure 7.6 and re-install with the switch bracket so that the spring loaded switch rod will be contacted by the throttle control lever. Adjust the bracket and switch so that when the throttle control lever is beyond 3/4 throttle the switch is engaged. The switch can be rotated on the bracket and the bracket can also be rotated where it mounts to the vehicle.

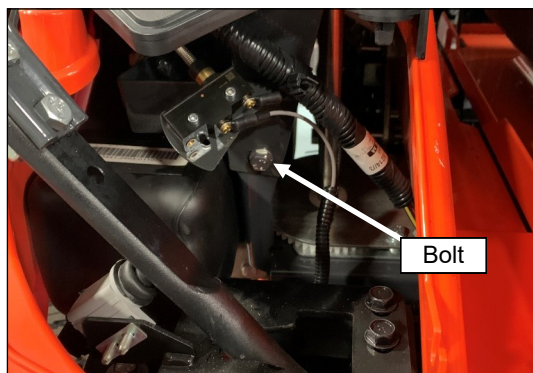


Fig. 7.6 (Install Switch Bracket)

- 7.7 Re-install the plastic cover (removed in step 1.4) over the right hand control stick.



Fig. 7.7 (Re-Install Cover)

- 7.8 Route the remaining section of the harness with the white connector on the end forward from the battery area over the ROPS and up under the seat. The harness should run across the top of the transmission along the existing OEM harness and end on the left side of the vehicle.

Note: Wires must be routed above the ROPS, but below the flat area that the hood seals on when it is closed.



Fig. 7.8 (Route Wiring)

- 7.9 Connect the white connector on the harness to the mating connector on the secondary regulator.

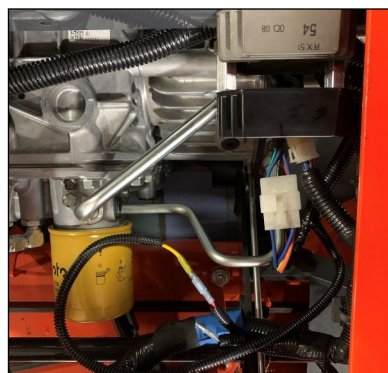


Fig. 7.9 (Connect Regulator)

CAB INSTALLATION

- 7.10 Cut the blue tape on the OEM vehicle wire harness under the seat to expose a male and female bullet terminal. Connect the male bullet terminal at the end of the yellow wire on the A/C wire harness to the female bullet terminal on the OEM harness.

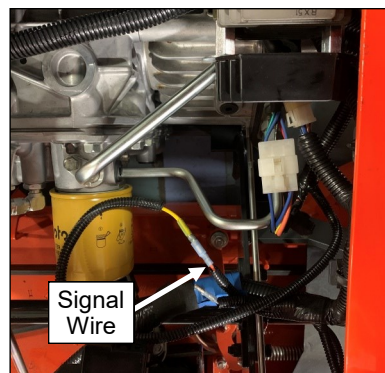


Fig. 7.10 (Locate OEM Signal Wire)

- 7.11 Route the two remaining sections of wires on the A/C harness out the rear of the left side of the vehicle so that they pass above the ROPS tube and end near the compressor.
- 7.12 Re-connect the OEM dynamo wires to the vehicle wire harness. Connect the blue wires with the two bullet terminals from the A/C harness to the bullet terminals on the secondary dynamo.



Fig. 7.12 (Connect Dynamo Wiring)

- 7.13 Connect the female bullet terminal on the end of the blue wire to the male bullet terminal on the compressor.
- 7.14 Remove the bolt shown in figure 7.13 and install the 3/8" ring terminal from the A/C harness onto the bolt so that it is contacting the ear of the compressor.
- 7.15 Use cable ties to secure the wire harness going to the compressor to the hoses.

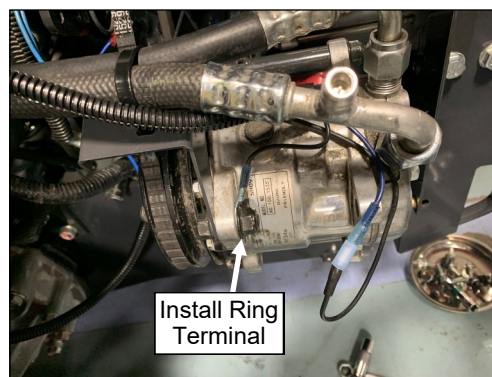


Fig. 7.13 (Connect Dynamo Wiring)

- 7.16 Re-install the negative terminal back onto the battery post and tighten.
- 7.17 Install the 4 ring terminals on the black ground wires to the battery bolt and secure with an additional nut.

Hardware Used
5/16-18 Serrated Nut

Qty
1

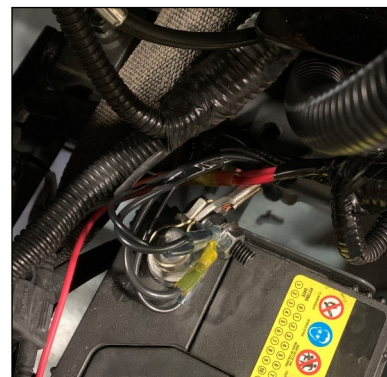


Fig. 7.17 (Connect Ground Wires)

CAB INSTALLATION

Step 8: (Functionality Testing)

- 8.1 Ensure that all wires and hoses are securely fastened with cable ties to prevent any rubbing or chaffing on sharp or hot objects.
- 8.2 Turn the vehicle on and check to make sure that belts and components are not vibrating excessively.
- 8.3 Bring engine to full throttle, turn on A/C blower, and move thermostat to cold.
- 8.4 Check to make sure A/C is blowing cold air.
- 8.5 Turn engine off and allow to cool.

Step 9: (Shroud Installation)

- 9.1 Remove the two OEM bolts shown in Figure 9.1, install the rear shroud bracket, and re-install the bolts.

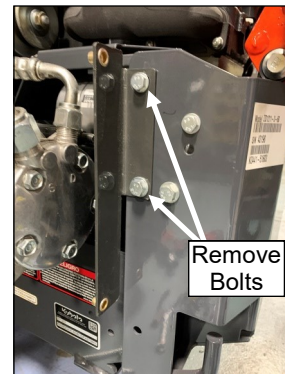


Fig. 9.1 (Install Rear Shroud Bracket)

- 9.2 Install the front shroud bracket oriented as shown so that the bolts for the shroud can be installed from the front. Secure to the pre-existing hole in the vehicle frame.

<u>Hardware Used</u>	<u>Qty</u>
M6x1.0x20mm Flange Bolt	1
M6x1.0 Nylock Nut	1



Fig. 9.2 (Install Front Shroud Bracket)

- 9.3 Assemble the front shroud panel to the front side of the bracket installed in step 9.2. Leave bolts finger tight.

<u>Hardware Used</u>	<u>Qty</u>
1/4-20x3/4" Flange Bolts	2

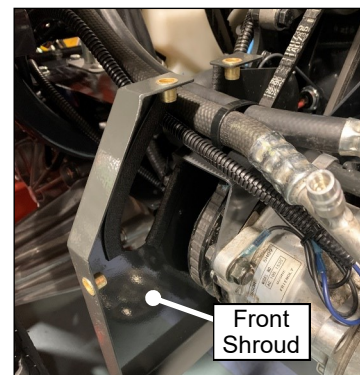


Fig. 9.3 (Install Front Shroud Panel)

CAB INSTALLATION

- 9.4 Assemble the rear shroud panel and cover together as shown. Leave the bolts loose at this time.

Hardware Used

1/4-20x3/4" Flange Bolts

Qty

3

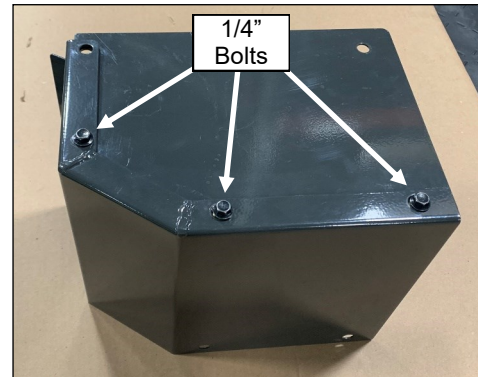


Fig. 9.4 (Assemble Cover Panel)

- 9.5 Assemble the rear shroud panel to the vehicle. Tighten all shroud bolts at this time.

Hardware Used

1/4-20x3/4" Flange Bolts

Qty

6

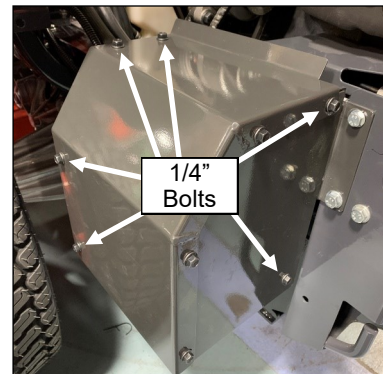


Fig. 9.5 (Install Shroud over Compressor)

Step 10: (Filler Installation)

- 10.1 Raise the seat and install the rubber underseat filler panel as shown. Start by aligning the panel over the round rubber bumpers that the seat rests on and work around the perimeter to attach to the pre-installed Velcro.
- 10.2 Install Velcro around the perimeter of the underseat filler in the areas where Velcro was not pre-installed using the filler as the locating template for the Velcro. Be sure to wipe down the surfaces where the Velcro will be adhered and that the surfaces are at room temperature.
- 10.3 Lower the seat, slide the seat completely forward, tilt seat back forward, and install adhesive Velcro to the seat base so that it is located up against the stamped rib as shown.

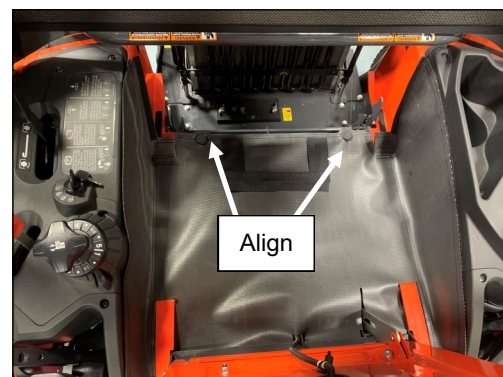


Fig. 10.1 (Install Underseat Filler)

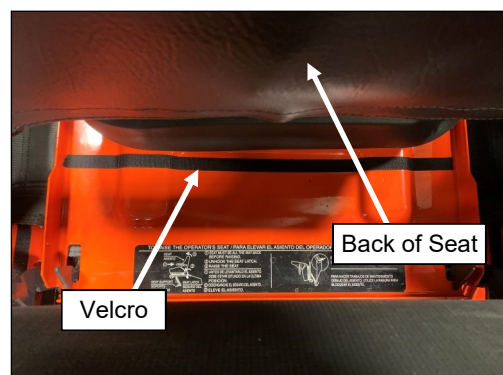


Fig. 10.3 (Install Velcro)

CAB INSTALLATION

- 10.4 Install the upper portion of the rubber filler along the bottom edge of the rear panel to locate it and then secure under the seat and along the sides.

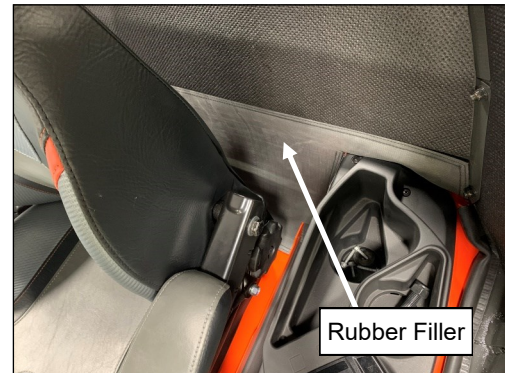


Fig. 10.4 (Filler Location)

- 10.5 The back ends of the rubber filler should be pulled out under the cab so that they can be velcroed to the fenders behind the cab.
- 10.6 Use the rubber filler as a guide and apply adhesive Velcro to the tractor fenders behind the cab.

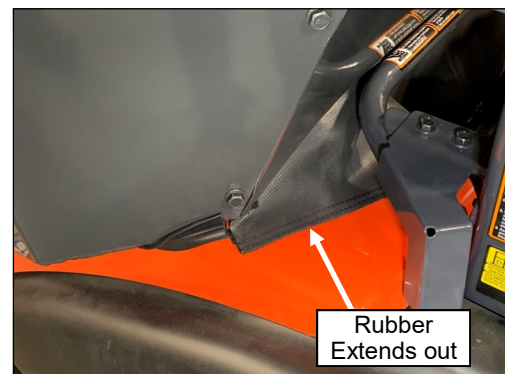


Fig. 10.5 (Filler Location)

Step 11: (Final Installation)

- 11.1 Re-install doors and install gas shocks. The end with the red tab should be attached to the sideframe of the vehicle.
- 11.2 Re-install the front hinged cover if working on a 60" mower.
- 11.3 If working on a 72" mower, inspect along the floormat across the entire front of the vehicle and apply a bead of black silicone to fill any gaps that may occur.
- 11.4 Re-install battery cover.

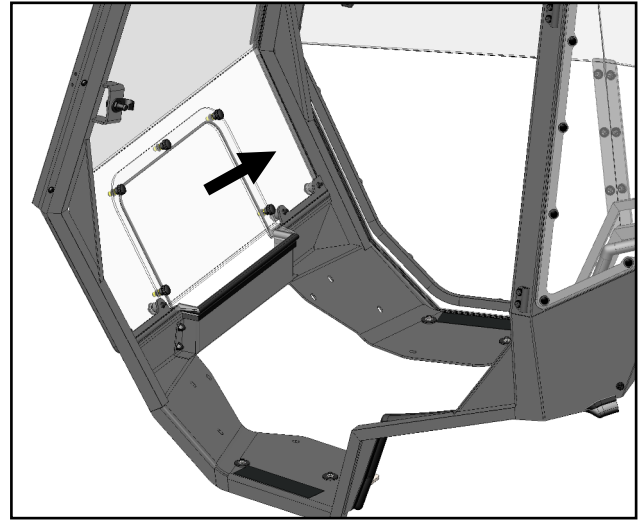


Fig. 11.1 (Attach Gas Shock)

CAB FEATURES & OPERATION

REMOVABLE FRONT WINDOW

When pivoting the front axle, remove the (5) thumb nuts securing the front center window. This will allow the front cover to fully open to clear the axle.



Removable Front Window


AIR CONDITIONING OPERATION

Turn the 4 position ventilation switch to activate the blower. This can be used as just a blower with the A/C compressor turned off.

Rotate the A/C switch to the desired temperature setting to turn the compressor on/off.

In order for the A/C compressor to function, the vehicle throttle must be set at full speed.

The blower must be turned on in order for the A/C compressor to function.

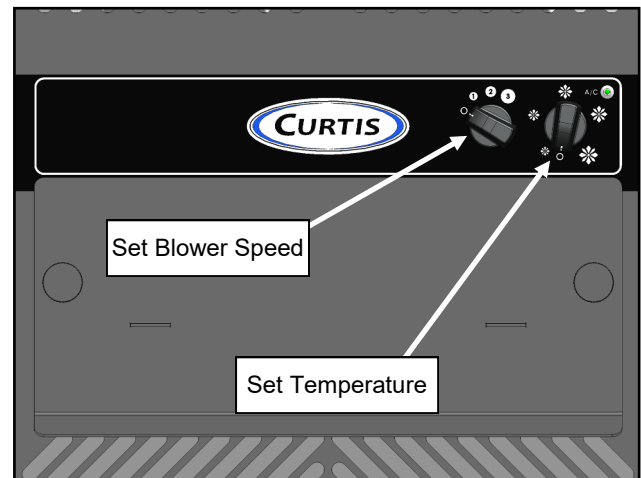


A/C Controls

AIR FILTER CHECK

Remove the two thumbscrews on the face of the A/C and slide the drawer out to access the air filter.

Change the filter as needed based on operating conditions.

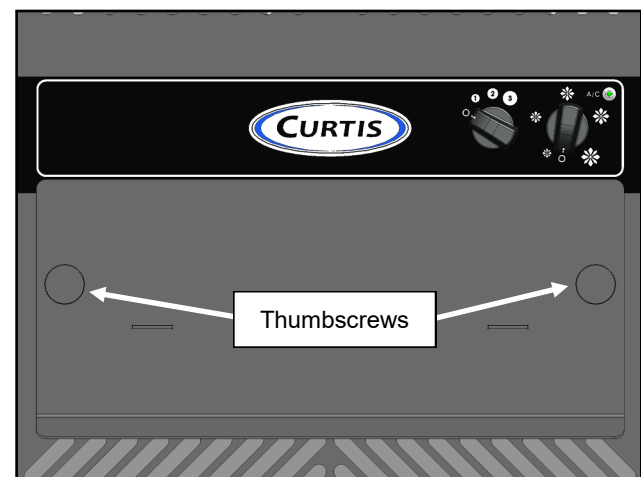

Air Filter Access

CARE AND MAINTENANCE


- DO NOT use glass cleaner to clean windows. It will damage the material. Mild dish soap and water should be used to clean all window panels. Use a soft bristled brush or sponge to clean panels.
- Avoid wiping the windows while they are dry. Hose down with water to remove heavy debris before wiping windows. Water acts as a lubricant to help prevent scratches.
- Re-apply grease periodically as needed to the door striker pins, door latch assemblies, and the door hinges.
- Check the belt tension after the first 10 hours of use.
- Check and tighten hardware after 40 hours of operation. Periodically inspect and tighten hardware for the remainder of the unit's life. Check for any wearing or chaffing on hoses or wiring and correct as necessary.
- Wash the painted surfaces of the cab with commercial automotive cleaning products.
- Change cabin air filter as required depending on usage conditions.
- Clean the exterior of the condenser after every 50 hours of operation, or as needed depending on usage conditions.
- This product is designed with the use of R134a as a refrigerant. Never substitute other refrigerants, use of any other refrigerant will void warranty.
- Charge unit with 2.5 lbs. of R134a refrigerant.
- Apply vacuum for a minimum of 20 minutes prior to charging the air conditioner with R134a.
- Do not vent refrigerant to the atmosphere. If the unit has to be discharged for any reason, recover the refrigerant in compliance with federal, state, and local laws.
- Refrigerant Oil - use only ZEROL ESTER 68SL to replenish any oil lost during refrigerant recovery.
- Replace the drier receiver (9SV-9AC-00003) when replacing a compressor (9SV-9AC-00006).

TROUBLESHOOTING


- Ensure that throttle lever is activating the switch when moved to its max rpm position. An audible click should be heard when moving the throttle with the vehicle off.
- Check all electrical connections to ensure that proper connections are made and terminals are all tight.
- Check Battery Condition:
Resting/No Load Voltage should be 12.35V or greater.
Terminals should be clean and tight.
- Check all fuses:
30 amp fuse located at battery
15 amp fuse located near relays, located inside the air conditioner. (accessible with filter drawer removed)
20 amp fuse located near regulator under operator's seat
- Check both relays. Located inside the air conditioner. (accessible with filter drawer removed)
- Check regulator output. The output should be 12-14 volts DC.
- Check the tension of the OEM and secondary drive belts

SERVICE PARTS


ROOF ASSEMBLY
P/N: 8SV-101-00056

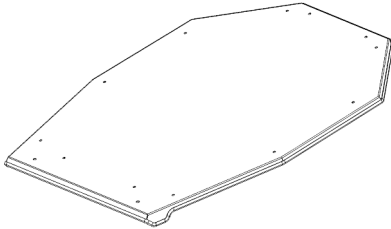


WINDSHIELD ASSEMBLY
P/N: 8SV-102-00030

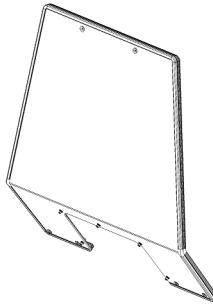


WINDSHIELD SUPPORT ASSEMBLY
P/N: 8SV-103-00024

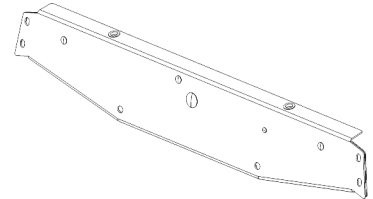


REAR PANEL ASSEMBLY
P/N: 8SV-106-00036

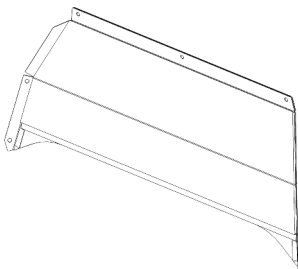


DOOR ASSEMBLY, LEFT
P/N: 8SV-107-00040-L

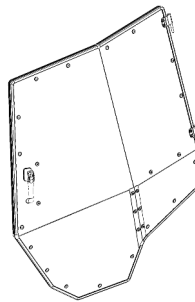


DOOR ASSEMBLY, RIGHT
P/N: 8SV-107-00040-R

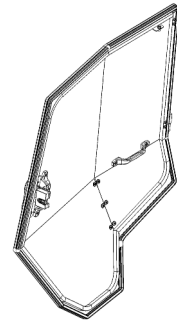


SIDEFRAME ASSEMBLY, LEFT
P/N: 8SV-109-00020-L

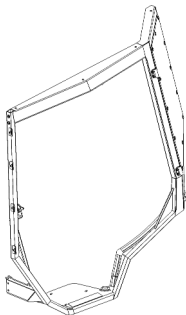


SIDEFRAME ASSEMBLY, RIGHT
P/N: 8SV-109-00020-R

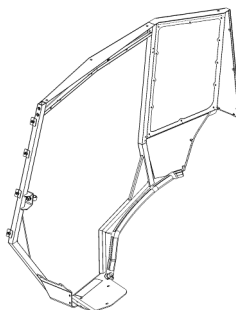

FRONT LOWER CROSS ASSEMBLY
P/N: 8SV-113-00220

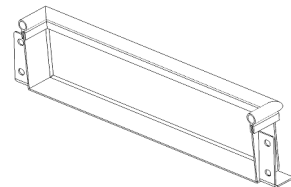

REAR FRAME ASSEMBLY
P/N: 8SV-113-00221

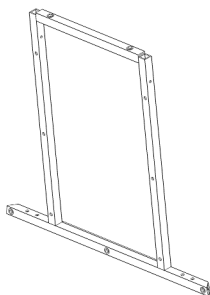

A-PILLAR CLAMP, LEFT
P/N: 8SV-SM-01727-L




A-PILLAR CLAMP, RIGHT
P/N: 8SV-SM-01727-R




SERVICE PARTS


A/C UNIT, REAR MOUNTED
P/N: 8SV-101-00005-KG

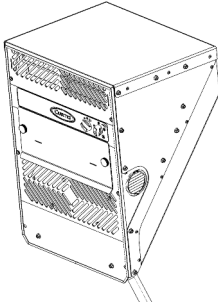


A/C COVER ASSEMBLY
P/N: 8SV-303-00012-KG

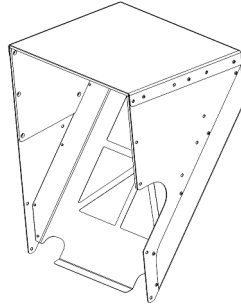


ROPS MOUNT, LEFT
P/N: 8SV-SM-01715-L

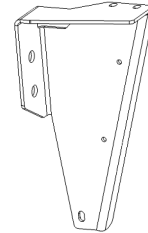


ROPS MOUNT, RIGHT
P/N: 8SV-SM-01715-R

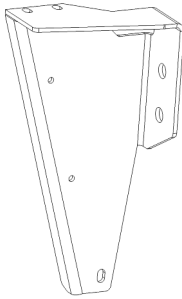


ROPS MOUNT PLATE, UPPER
P/N: 8SV-SM-02026

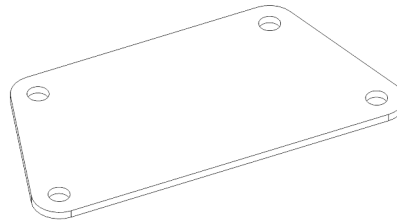


SWITCH BRACKET ASSEMBLY
P/N: 8SV-113-00227

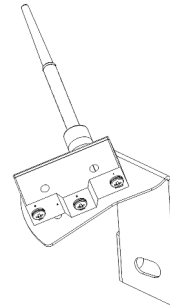


A/C AIR DIVERTER FLAP
P/N: 8SV-SM-02012

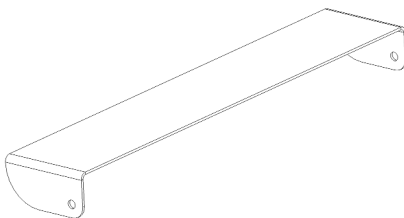


BRACKET, UPPER DYNAMO
P/N: 8SV-WA-00419

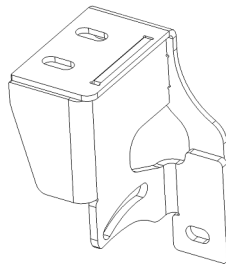


BRACKET, DYNAMO-MUFFLER
P/N: 8SV-SM-01869

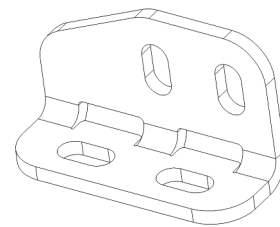

DYNAMO TAB
P/N: 8SV-SM-01894

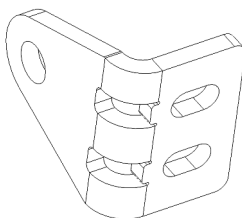

BRACKET, DYNAMO, BRIDGE
P/N: 8SV-WA-00424

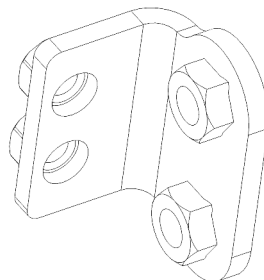


BRACKET, DYNAMO PIVOT
P/N: 8SV-WA-00420




SERVICE PARTS


SHROUD MOUNT BRACKET, REAR
P/N: 8SV-110-00088




SHROUD MOUNT BRACKET, FRONT
P/N: 8SV-110-00089

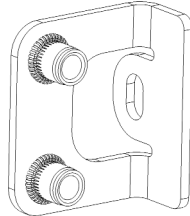


FRONT SHROUD COVER
P/N: 8SV-113-00236

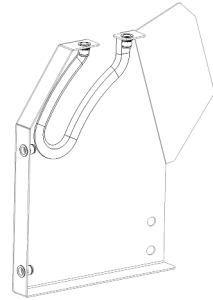


REAR SHROUD COVER
P/N: 8SV-113-00238

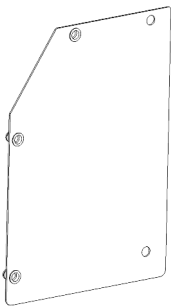


SHROUD COVER
P/N: 8SV-SM-01880

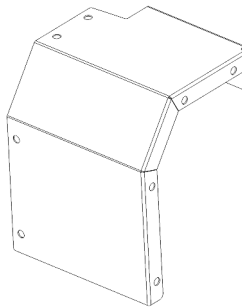


ROPS MOUNT, UPPER
P/N: 8SV-SM-01916




ROPS BRACKET, ROOF TAB
P/N: 8SV-SM-01917

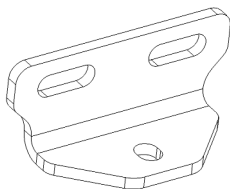


COMPRESSOR ADJUSTMENT ARM
P/N: 8SV-WA-00421

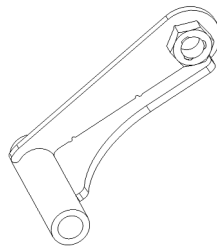


COMPRESSOR BRACKET
P/N: 8SV-WA-00422

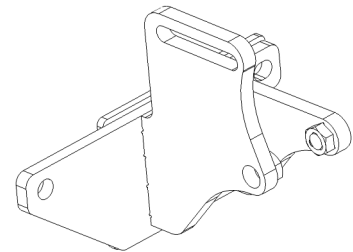


FRONT BRUSH PANEL
P/N: 8SV-111-00033

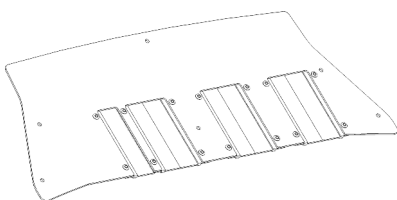

HOSE, #8, COMP TO COND
P/N: 8SV-305-00022

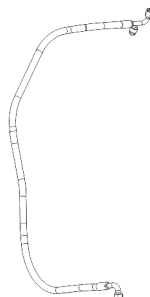


HOSE, #6, DRIER TO EVAP
P/N: 8SV-305-00023

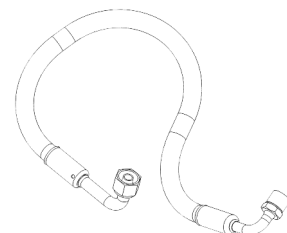


SERVICE PARTS


HOSE, #10 EVAP TO COMP
P/N: 8SV-305-00024

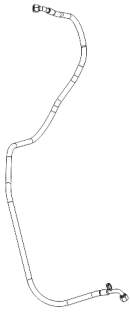


HOSE, #6, COND TO DRYER
P/N: 8SV-305-00025

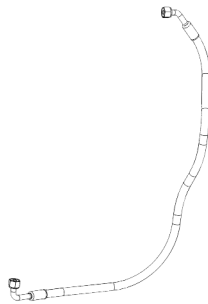


FRONT REMOVABLE PANEL
P/N: 9SV-P-00132

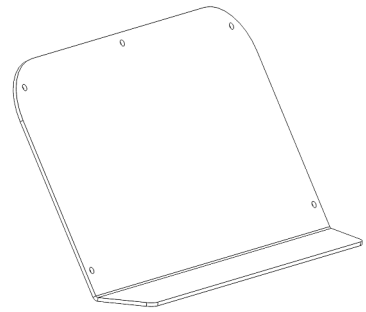

DOOR SKIN, LEFT, W/ HARDWARE
P/N: 9SV-P-00133-L

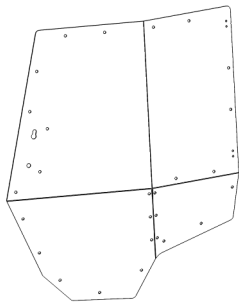


DOOR SKIN, RIGHT, W/ HARDWARE
P/N: 9SV-P-00133-R

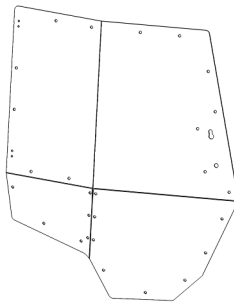

REAR LEG WINDOW, W/ HARDWARE
P/N: 9SV-P-00128




THUMB NUTS (QTY: 5)
P/N: 9SV-72-89-0094

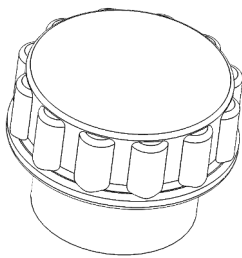


LOUVERED PLUG WITH FILTER
P/N: 9SV-9DP25



EVAPORATOR
P/N: 9SV-9AC-00046

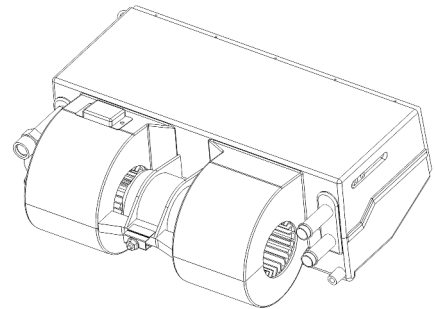


KNOB
P/N: 9SV-OHC-27

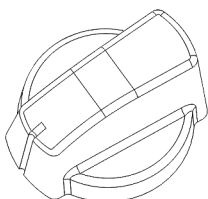

A/C WIRE HARNESS
P/N: 9SV-WH-00130




AIR FILTER
P/N: 9SV-9HR-00032

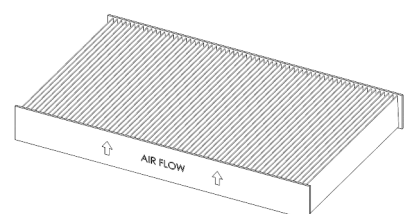


SERVICE PARTS


A/C COMPRESSOR
P/N: 9SV-9AC-00043

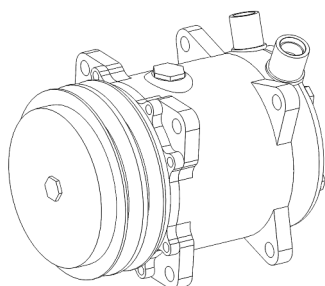


LIMIT SWITCH
P/N: 9SV-ULS-SWITCH

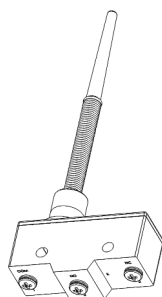


V-BELT
P/N: 9SV-9BLT-13




DYNAMO
P/N: 9SV-9ALT-05




DYNAMO SHAFT
P/N: 9SV-MP-00049

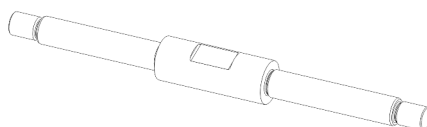


REGULATOR/RECTIFIER
P/N: 9SV-85-17-0060

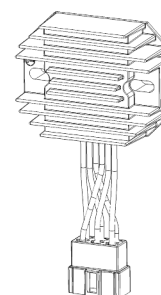

UNDERSEAT FILLER LOWER
P/N: 8SV-112-00067

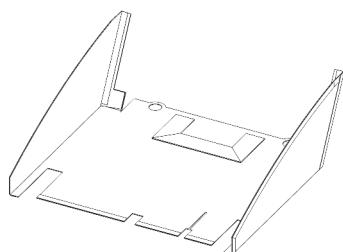

UNDERSEAT FILLER UPPER
P/N: 8SV-112-00068

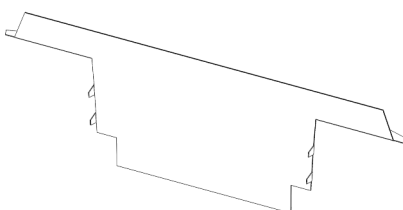








BOLT TORQUE

BOLT TORQUE SPECIFICATIONS

GENERAL TORQUE SPECIFICATION TABLE

Use the following torques when special torques are not given. These values apply to fasteners as received from suppliers, dry, or when lubricated with normal engine oil. They do not apply if special graphited or moly disulphide greases or other extreme pressure lubricants are used. This applies to both UNF and UNC threads. Remember to always use grade five or better when replacing bolts.

IMPORTANT: On all PLATED GRADE 8 bolts, reduce torque 15% from listed bolt torque specification.

SAE Grade No.		2				5				8*			
Bolt head identification mark as per grade. NOTE: Manufacturing Marks Will Vary						  				  			
Bolt Size		TORQUE				TORQUE				TORQUE			
		Pounds Feet		Newton-Meters		Pounds Feet		Newton-Meters		Pounds Feet		Newton-Meters	
Inches	Millimeters	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
1/4	6.35	5	6	7	8	9	11	12	15	12	15	16	20
5/16	7.94	10	12	14	16	17	20.5	23	28	24	29	33	39
3/8	9.53	20	23	27	31	35	42	48	57	45	54	61	73
7/16	11.11	30	35	41	47	54	64	73	87	70	84	95	114
1/2	12.70	45	52	61	70	80	96	109	130	110	132	149	179
9/16	14.29	65	75	88	102	110	132	149	179	160	192	217	260
5/8	15.88	95	105	129	142	150	180	203	244	220	264	298	358
3/4	19.05	150	185	203	251	270	324	366	439	380	456	515	618
7/8	22.23	160	200	217	271	400	480	542	651	600	720	814	976
1	25.40	250	300	339	406	580	696	787	944	900	1080	1220	1464
1-1/8	25.58	-	-	-	-	800	880	1085	1193	1280	1440	1736	1953
1-1/4	31.75	-	-	-	-	1120	1240	1519	1681	1820	2000	2468	2712
1-3/8	34.93	-	-	-	-	1460	1680	1980	2278	2380	2720	3227	3688
1-1/2	38.10	-	-	-	-	1940	2200	2631	2983	3160	3560	4285	4827

*Thick Nuts must be used with Grade 8 bolts

METRIC BOLT TORQUE SPECIFICATIONS

		5.6			8.8			10.9		
Size of Screw	Property Class	Course Thread			Fine Thread					
		Pitch (mm)	Pounds Feet	Newton-Meters	Pitch (mm)	Pounds Feet	Newton-Meters			
M6	5.6	1.0	3.6-5.8	4.9-7.9	-	-	-			
	8.8		5.8-9.4	7.9-12.7		-	-			
	10.9		7.2-10	9.8-13.6		-	-			
M8	5.6	1.25	7.2-14	9.8-19	1.0	12-17	16.3-23			
	8.8		17-22	23-29.8		19-27	25.7-36.6			
	10.9		20-26	27.1-35.2		22-31	29.8-42			
M10	5.6	1.5	20-25	27.1-33.9	1.25	20-29	27.1-39.3			
	8.8		34-40	46.1-54.2		35-47	47.4-63.7			
	10.9		38-46	51.5-62.3		40-52	54.2-70.5			
M12	5.6	1.75	28-34	37.9-46.1	1.25	31-41	42-55.6			
	8.8		51-59	69.1-79.9		55-68	75.9-92.1			
	10.9		57-66	77.2-89.4		62-75	84-101.6			
M14	5.6	2.0	49-56	66.4-75.9	1.5	52-64	70.5-86.7			
	8.8		81-93	109.8-126		90-106	122-143.6			
	10.9		96-109	130.1-147.7		107-124	145-168			
M16	5.6	2.0	67-77	90.8-104.3	1.5	69-83	93.6-112.5			
	8.8		116-130	157.2-176.2		120-138	162.6-187			
	10.9		129-145	174.8-196.5		140-158	189.7-214.1			
M18	5.6	2.0	88-100	119.2-136	1.5	100-117	136-158.5			
	8.8		150-168	203.3-227.6		177-199	239.8-269.6			
	10.9		175-194	237.1-262.9		202-231	273.7-313			
M20	5.6	2.5	108-130	146.3-176.2	1.5	132-150	178.9-203.3			
	8.8		186-205	252-277.8		206-242	279.1-327.9			
	10.9		213-249	288.6-337.4		246-289	333.3-391.6			